

Objectives

- To become familiar with:
 - Antenna terminology;
 - Features of common antennas;
 - Antenna radiation patterns;
 - Calculating dimensions of common antennas; and
 - Construction techniques for basic antennas.

Al Penney
VO1NO

Practical Dipole Antenna

- Impedance approximately **73 ohms**.
- Advantages:
 - Cheap;
 - Easy to build;
 - Rugged; and
 - One feedline can serve several antennas.
- Disadvantages:
 - Narrow bandwidth;
 - Requires 2 supports, sometimes 3;
 - Must be fed at center; and
 - One band only.

Al Penney
VO1NO

Many hams' first choice of antenna is a half-wave dipole. But don't be misled – just because they are easy to make doesn't mean they don't work well. In fact, a half-wave dipole will often outperform many compromise commercial multiband antennas.


Half-wave dipoles are easy to install and erect and are not nearly as likely as end-fed wires to give rise to EMC/interference problems.

As the name suggests, a dipole has two 'poles' or sections to the radiating element. In its most common form it is a half-wavelength long at the frequency of operation.

The dipole when mounted horizontally radiates most of its power at right angles to the axis of the wire.

In this way it may be possible to angle the antenna to 'fire' in the direction where most contacts are wanted, although the dimensions of your garden are more likely to determine what is possible.

Dipole Antenna

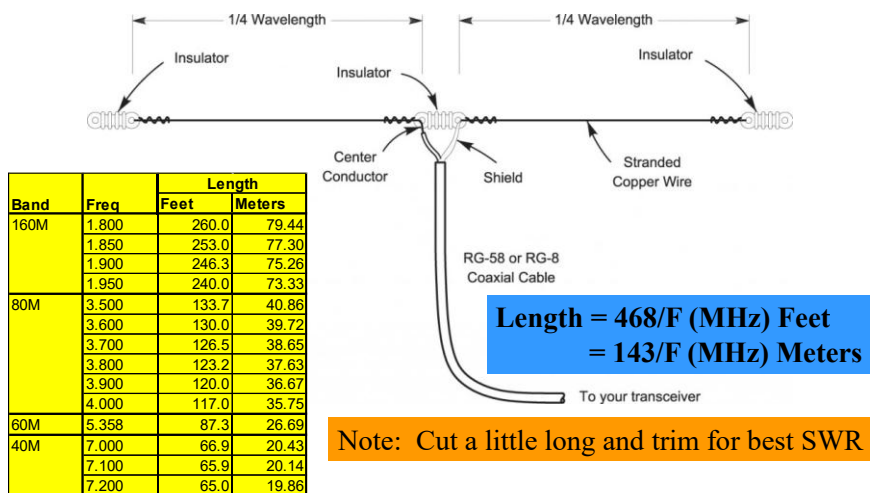

Al Penney
VO1NO

A dipole is quite easy to construct. The length of a half-wave dipole might be thought to be the same as a half-wavelength of the signal in free space, but this is not quite the case. A number of effects, including the velocity factor of the wire, the length / diameter of the wire used for the radiating element and capacitive end effects, mean that the actual length required is a little shorter.



Without the end effect the length of a dipole could be calculated from the formula length (metres) equals 150 / f, where f is the frequency in MHz. With the foreshortening effects the length can be approximated from the formula: Length (metres) = 143 / f (MHz). The lengths calculated from this should only be considered as an approximate value – it is best to cut the wire slightly longer than this and then twist the end of the wire back on itself to give the best match.

For a transmitting station one of the easiest ways is to monitor the reflected power on a voltage standing wave ratio, or VSWR, meter. If operation is tried at different points on the band (taking care not to cause interference) it will be noted that the VSWR is higher at some points than others.

It is also necessary to remember to seal the end of the coax to prevent moisture entering. If moisture does enter, losses rise considerably, rendering the coax useless.

Dipole Variations – Fan Dipole


- Several dipoles fed from same feedpoint
- Some interaction, so lengths may need adjustment
- Several construction techniques available online

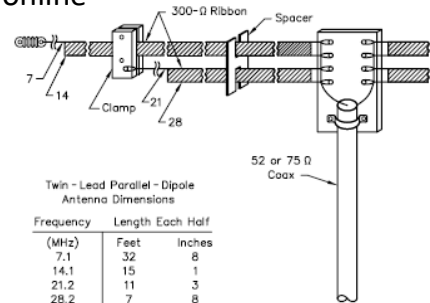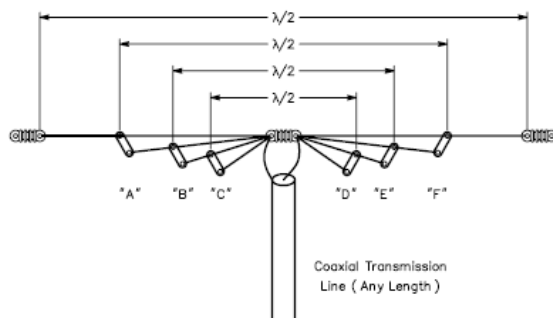

52 or 75 Ω
Coax

Al Penney
VO1NO

Dipole Variations – Fan Dipole

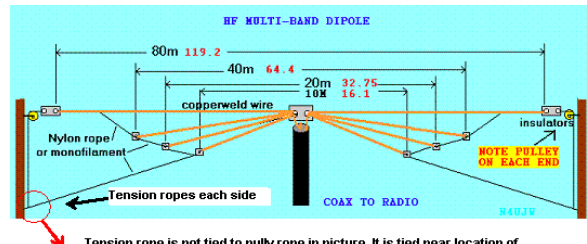

Tension rope is not tied to pulley rope in picture. It is tied near location of pulley rope down on supports within easy reach. It is tied last after final SWR adjustment and the antenna is in it's final position.

Suggested total lengths:
 80 meters - 120 feet
 40 meters - 65 to 66 feet
 20 meters - 34 feet
 10 meters - 17 feet


These lengths are not exact. Some tuning may be required. Use the standard formula $468 / \text{freqmhz}$ for total feet for each band (freq) of interest. Adjust each length longer or shorter as needed.

Al Penney
 VO1NO

Fan Dipole. Full-Size **Fan dipoles** are multi **dipoles** that are fed with a common feed point. The full-size **dipoles** are spread out like a **fan**, hence the name **Fan Dipole**. A good example of a Full-Size **Fan Dipole** is a full-size 40- and a full-size 80-meter **dipole** on a common feed.

Dipole Variations – Sloping Dipole

- Dipole can be supported from one end
- Omnidirectional if support is non-conductive
- May be slightly directional if mast is conductive
- Run coax away at 90 degrees to antenna

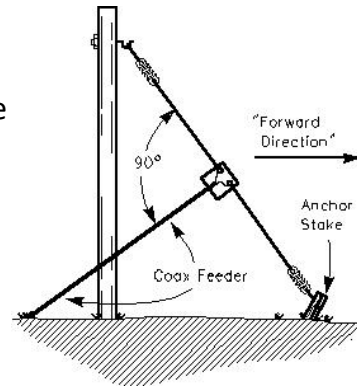

Al Penney
VO1NO

Dipole antennas need not be installed in a horizontal straight line. They are generally tolerant of bending, sloping or drooping as required by the antenna site. Remember, however, that dipole antennas are RF conductors. For safety's sake, mount all antennas away from conductors (especially power lines), combustibles and well beyond the reach of passersby.

A sloping dipole is shown in Fig 20.9. This antenna is often used to favor one direction (the "forward direction" in the figure). With a nonconducting support and poor earth, signals off the back are weaker than those off the front. With a nonconducting mast and good earth, the response is omnidirectional. There is no gain in any direction with a nonconducting mast.


A conductive support such as a tower acts as a parasitic element. (So does the coax shield, unless it is routed at 90° from the antenna.) The parasitic effects vary with earth quality, support height and other conductors on the support (such as a beam at the top). With such variables, performance is very difficult to predict.

Losses increase as the antenna ends approach the support or the ground. To prevent feed-line radiation, route the coax away from the feed-point at 90° from the antenna,

and continue on that line as far as possible.

Dipole Variations – Inverted V

- Variation of the Dipole.
- Impedance approximately 50 ohms.
- Advantages:
 - Requires only one support; and
 - Provides a better match to **50 ohm coax** cable.
- Disadvantages:
 - Those of a Dipole; and
 - The ends close to the ground present a safety hazard.

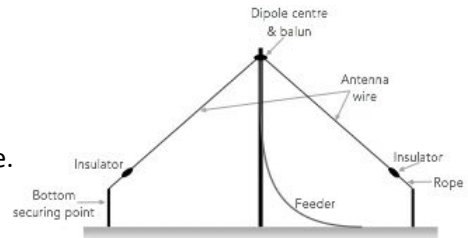

Al Penney
VO1NO

The maximum radiation from a dipole takes place in the centre. Accordingly, this is the most important area of the antenna to keep as high as possible.

Coupled with the fact that in many situations it is only possible to have one high mast or high point on the antenna, this often makes an inverted-V dipole (Fig 5) an ideal choice.

The antenna is basically an ordinary dipole, but rather than keeping it horizontal, a single mast or anchor point is used in the centre and the two halves of the dipole are angled downwards away from the central mast.

Although it does alter the radiation pattern, making it almost omnidirectional, its basic operation remains the same. In view of its convenience and operational advantages this type of antenna is widely used and is a favourite with many operators.

The main point to note when erecting a dipole is that the lower ends of the antenna should be kept out of reach of people.



The ends of the antenna will have a high voltage when used for transmitting and the installation should be such that it is not possible to touch them. Also, if the ends come down too low you

could get ground losses – keep them at least three metres high if possible.

The securing ropes should also be installed so that people cannot trip or stumble over them. A suitably-located tree or bush may help overcome this problem.

Dipole Variations – Inverted V


- Supported at the center, ends slope to ground
- Especially suitable for 80/60/40M bands
- Keep ends out of reach – high voltages!

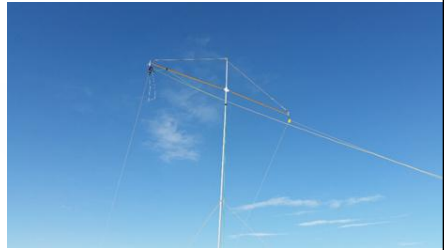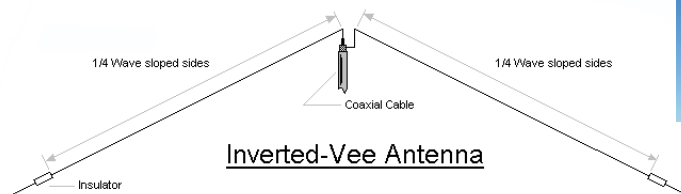

Al Penney
VO1NO

Dipole Variations – Folded Dipole

- A Full Wave Dipole that is folded back on itself.
- Impedance approximately **300 ohms**.
- Usually used on VHF/UHF.
- Advantages:
 - **Broader bandwidth than a dipole;**
- Disadvantages:
 - May require 2 or 3 supports;
 - Must be fed at center; and
 - One band only.

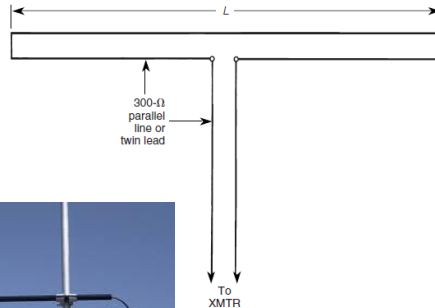

Al Penney
VO1NO

Folded Dipole

This antenna consists of two or more halfwavelength conductors of identical diameter shorted together at both ends and fed in the middle of *one* conductor. Except at the ends, the two conductors are held a few inches apart (at HF, at least) by insulated spacers. The two-wire folded dipole is often made with 300- Ω television antenna twin-lead transmission line. Because the free-space feedpoint impedance is nearly 300 Ω , or four times that of a conventional dipole, the antenna is a reasonably good match (depending on the height of the antenna above ground) for the same type of twin-lead used as the transmission line. Such a dipole will exhibit a 50 percent improvement in 2:1 VWSR bandwidth compared to a single-wire dipole. On 80 m, for instance, a folded dipole resonant at 3.750 MHz will cover from 3.6 to 3.9 MHz with an SWR of 2:1 or lower.

Why is the input impedance *four* times the input impedance of a conventional dipole when one of the two wires is fed? Recognize that the folded dipole is a continuous

1- λ loop. At each end of the fed wire, the current does a U-turn and continues into the unfed wire. If this current were of the same phase everywhere, it would thus be flowing in a spatial direction opposite to the current near the feedpoint. But it's also true that at or near the antenna design frequency the current in the fed half-wave element goes to zero at each end. Since the current in a wire that is longer than $\lambda/2$ reverses direction in adjacent $\lambda/2$ sections (i.e., at each current *node*), the current reverses at both ends of the folded dipole. When viewed from inside the wire (if that were possible), the current flowing in the unfed wire is thus 180 degrees out of phase *electrically* with the drive current, but its nominal *spatial* direction is the opposite of the current in the driven wire. The two effects (wire path and phase reversal) combine to put the unfed wire's current in phase with the drive current, as viewed from outside the wires. The current in the unfed wire is virtually identical in amplitude to that in the fed wire, suffering only a very slight reduction in amplitude from ohmic and radiation losses.


Dipole Variations – Folded Dipole




Al Penney
VO1NO

Dipole Variations – Folded Dipole

- Equal diameter conductors give a 4:1 step up feedpoint impedance transformation (e.g. 73 ohms of regular dipole to 300 ohms)

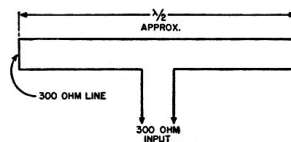

- Larger unbroken conductors permit different feedpoint impedances, e.g.: 200 ohms

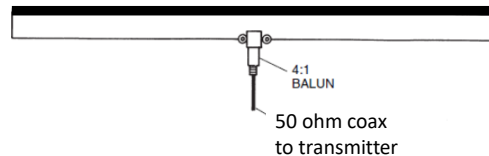

Al Penney
VO1NO

Folded Dipole


The impedance of a $\frac{1}{2}$ wavelength antenna broken at its center is about $70\ \Omega$. If a single conductor of uniform size is folded to make a $\frac{1}{2}$ wavelength dipole, the impedance is stepped up four times. Such a folded dipole can be fed directly with 300- Ω line with no appreciable mismatch. If a 4:1 balun is used, the antenna can be fed with 75- Ω coaxial cable. Higher step-up impedance transformation can be obtained if the unbroken portion is made larger in cross-section than the fed portion, as shown in [the figure](#).

The *impedance step-up ratio* for a two-wire folded dipole is 4:1 if the two conductors are of equal diameter. When they're not, the relationship is more complicated but the impedance step-up is generally proportional to the ratio of the unfed wire diameter to the fed wire diameter. Thus, a folded dipole can be designed to provide a specific feedpoint impedance to the transmitter and transmission line, within limits, by making one of the two wires larger than the other. In many installations, the best feedline for the folded dipole will be 300- Ω twin-lead or, better yet, open-wire line connected to a balanced wire ATU

at the transmitter end.

Dipole Variations – Trap Dipole

- Traps **isolate** sections of the antenna, permitting multi-band use.
- Advantages:
 - Multi-band operation.
- Disadvantages:
 - Those of a Dipole;
 - Not as efficient as separate dipoles;
 - Weight of the traps makes it difficult to hold up;
 - Pattern can be distorted; and
 - **Can radiate Harmonics (?)**.

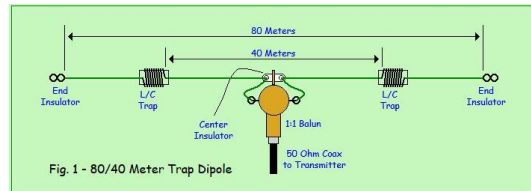

Al Penney
VO1NO

Trap dipoles provide multiband operation from a coax-fed single-wire dipole. A trap is a parallel-resonant circuit that effectively disconnects wire beyond the trap at the resonant frequency. Traps may be constructed from coiled sections of coax or from discrete LC components.


Choose capacitors (C) in the figure) that are rated for high current and voltage. Mica transmitting capacitors are good. Ceramic transmitting capacitors may work, but their values may change with temperature. Use large wire for the inductors to reduce loss. Any reactance (X_L and X_C) above 100 Ω (at f_0) will work, but bandwidth increases with reactance (up to several thousand ohms).

Check trap resonance before installation. This can be done with a dip meter and a receiver. To construct a trap antenna, cut a dipole for the highest frequency and connect the pretuned traps to its ends.

It is fairly complicated to calculate the additional wire needed for each band, so just add enough wire to make the antenna $1/2 \lambda$ and prune it as necessary. Because the inductance in each trap reduces the physical length needed for resonance, the finished antenna will

be shorter than a simple $1/2$ -l dipole.

Dipole Variations – Trap Dipole

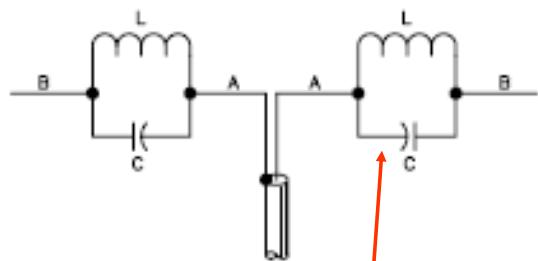

**A trap consists of a
Capacitor and Inductor**

Al Penney
VO1NO

By using tuned circuits of appropriate design strategically placed in a dipole, the antenna can be made to show what is essentially fundamental resonance at a number of different frequencies.

A trap in an antenna system can perform either of two functions, depending on whether or not it is resonant at the operating frequency. A familiar case is where the trap is resonant in an amateur band. For the moment, let us assume that each parallel L/C combination is resonant in the 7-MHz band. Because of its resonance, the trap presents a high impedance at that point in the antenna system. The electrical effect at 7 MHz is that the trap behaves as an insulator. It serves to divorce the outside ends, the B sections, from the antenna. The result is easy to visualize—we have an antenna system that is resonant in the 7-MHz band. Each 33-foot section (labeled A in the drawing) represents $1/4 \lambda$, and the trap behaves as an insulator. We therefore have a full-size 7-MHz antenna. The second function of a trap, obtained when the frequency of operation is *not* the resonant frequency of the trap, is one of electrical loading. If the operating frequency is below that of trap resonance, the trap behaves as an inductor; if above, as a capacitor. Inductive loading will electrically lengthen the antenna, and capacitive


loading will electrically shorten the antenna.

Let's carry our assumption a bit further and try using the antenna we just considered at 3.5 MHz. With the traps resonant in the 7-MHz band, they will behave as inductors when operation takes place at

3.5 MHz, electrically lengthening the antenna. This means that the total length of sections A and B (plus the length of the inductor) may be something less than a physical $1/4 \lambda$ for resonance at 3.5 MHz.

Thus, we have a two-band antenna that is shorter than full size on the lower frequency band. But with the electrical loading provided by the traps, the overall electrical length is $1/2 \lambda$. The total antenna length needed for resonance in the 3.5-MHz band will depend on the L/C ratio of the trap elements.

Dipole Variations – Trap Dipole

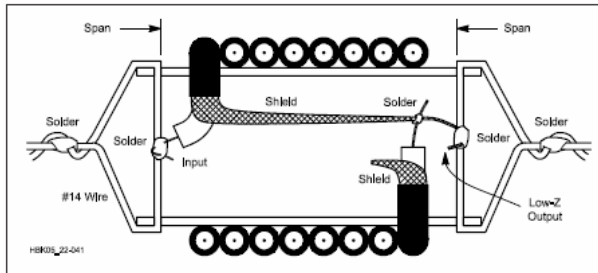

Al Penney
VO1NO

A type of trap described by Gary O'Neil, N3GO, in October 1981 *Ham Radio* achieves high impedance with low Q, effectively overcoming the bandwidth problem. The N3GO trap is fabricated from a single length of coaxial cable. The cable is wound around a form as a single-layer coil, and the shield becomes the trap inductor. The capacitance between the center conductor and shield resonates the trap. At each end of the coil the center conductor and shield are separated. At the "inside" end of the trap, nearer the antenna feed point, the shield is connected to the outside antenna wire. At the outside end, the center conductor is attached to the outside antenna wire. The center conductor from the inside end is joined to the shield from the outside end to complete the trap. Constructed in this way, the trap provides high isolation over a greater bandwidth than is possible with conventional traps.

Robert C. Sommer, N4UU, in December 1984 *QST* described how to optimize the N3GO trap. The analysis shows that best results are realized when the trap diameter is from 1 to 2.25 times greater than the length. Trap diameters toward the higher end of that range are better.

End Fed Long Wire Antenna


- Should be as long (at least $\frac{3}{4} \lambda$) and high as possible.
- Must have a good ground.

- Advantages:

- Multiband;
- Can bend to fit as necessary; and
- Feedpoint is at the end.

- Disadvantages:

- Requires a matching unit;
- Pattern difficult to predict;
- High voltages on the antenna; and
- **RF present in the shack.**

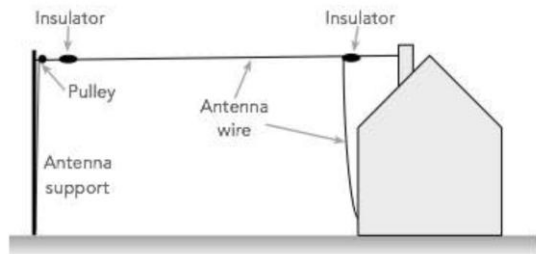

Al Penney
VO1NO

The end fed wire antenna simply consists of a length of wire that is as high and reasonably long as possible. The wire is then connected to the transmitting and receiving radio communication station.


The antenna wire is then typically take out of the radio room, or shack and taken to a horizontal section that runs above obstructions. Once the wire leaves the receiver, transmitter, or antenna tuner, the wire starts to act as an antenna, picking up signals and radiating them.

For best receiving performance and also to ensure that when used with a transmitter, the correct impedance is seen, an antenna tuner or antenna tuning unit, ATU should always be used.

The antenna tuner is placed between the transmitter or receiver and the antenna wire. If a tuner is not used, then the impedance of the antenna will not match that of the receiver or transmitter input and this will result in lower efficiency. Also the transmitter may have trouble matching to this, and this may result in lower power output, or even damage to the transmitter output.

A further requirement is that it is necessary to have a good radio earth - this is not the protective means earth, but an earth connection against which the long wire antenna or end fed wire antenna can work.

End Fed Long Wire Antenna

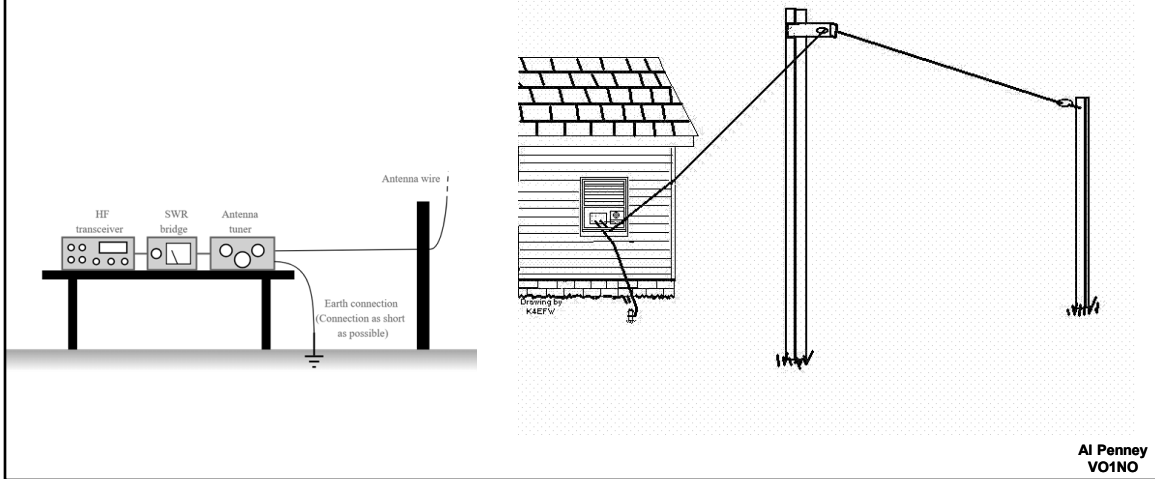

The wire to the earth connection should be as short as possible, otherwise the inductance etc in the wire will start to place the station at an RF potential above ground.

Transmatch (Antenna Tuner)



Al Penney
VO1NO

Antenna tuner, **matching network**, **matchbox**, **transmatch**, **antenna tuning unit (ATU)**, **antenna coupler**, and **feedline coupler** are all equivalent names for a device connected between a **radio transmitter** and its **antenna**, to improve power transfer between them by **matching** the specified load **impedance** of the radio to the combined input impedance of the feedline and the antenna.


Antenna tuners are particularly important for use with transmitters.

Transmitters are typically designed to feed power into a **reactance-free**, resistive **load** of a specific value, very often 50 **ohms**.^[1] However the antenna and feedline impedance can vary depending on frequency and other factors. If the **impedance** seen by the transmitter departs from the design load, circuits in modern transmitters automatically cut back the power output to protect the equipment from the consequences of the **impedance mismatch**.

In addition to reducing the power radiated by the antenna, the mismatch can distort the signal, and in high power transmitters may overheat the transmitter. Because of this, ATUs are a standard part of almost all radio transmitting systems. They may be a **circuit** incorporated into the transmitter itself, or a separate piece of equipment connected between the transmitter and the antenna. In transmitting systems with an antenna separated from the transmitter and connected to it by a **transmission line** (**feedline**), there may be

yet another [matching network](#) (or ATU) where the feedline connects to the antenna, to match the transmission line's impedance to the antenna. Transmitters in [cell phones](#) and [walkie-talkies](#) have an ATU circuit inside permanently set to work with the installed antenna.^[a] In multi-frequency communication stations like [amateur radio](#) stations, and high power transmitters like [radio broadcasting stations](#), the ATU is adjustable to accommodate changes in the transmitting system. Matching the transmitter, feedline, antenna, or their environment by adjustment of the ATU is an important procedure done after any change the system, with an instrument called an [SWR meter](#) typically used to measure the degree of match or mismatch.

Connecting a Transmatch

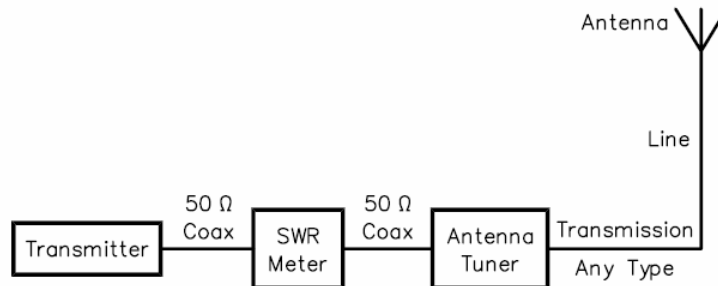

Al Penney
VO1NO

Use in transmitters

Antenna tuners are used almost universally with transmitters. Without an ATU, in addition to reducing the power radiated by the antenna, the reflected current can overheat transformer cores and cause signal distortion. In high-power transmitters it may overheat the transmitter's output amplifier. When reflected power is detected, self-protection circuits in modern transmitters automatically reduce power to safe levels, hence reduce the power of the signal leaving the antenna even further.

Because of this, ATUs are a standard part of almost all radio transmitting systems. They may be a [circuit](#) incorporated into the transmitter itself, [\[a\]](#) or a separate piece of equipment connected between the transmitter and the antenna. In transmitting systems with an antenna separated from the transmitter and connected to it by a [transmission line \(feedline\)](#), there may be another [matching network](#) (or ATU) at the antenna that matches the transmission line's impedance to the antenna.

High power transmitters like [radio broadcasting stations](#) have a matching unit that is adjustable to accommodate changes in the frequency, the transmitter, the antenna, or the antenna's environment. Adjusting the ATU to match the transmitter to the antenna is an important procedure which is done after any

work on the transmitter or antenna occurs. The effect of this adjustment is typically measured using an instrument called an [SWR meter](#), which indicates the degree of mismatch between a reference impedance (typically 50 + j 0 Ohms) and the complex impedance at the point of insertion of the [SWR meter](#).

What an "antenna tuner" actually tunes

Despite its name, an antenna "tuner" does not actually tune the antenna. It matches the complex impedance of the transmitter to that of the input end of the feedline. The input impedance of the transmission line will be different than the [characteristic impedance](#) of the feedline if the impedance of the antenna on the other end of the line does not match the line's characteristic impedance. The consequence of the mismatch is that the line's impedance (voltage to current ratio and phase) will oscillate along the line, or equivalently, raise out-of-phase voltage standing waves and current standing waves along the feedline.

If both the tuner and the feedline were lossless, tuning at the transmitter end would indeed produce a perfect match at every point in the transmitter-feedline-antenna system.^[2] However, in practical systems lossy feedlines limit the ability of the antenna tuner to change the antenna's [resonant frequency](#). If the loss of power is low in the line carrying the transmitter's signal to the antenna, a tuner at the transmitter end can produce a worthwhile degree of matching and tuning for the antenna and feedline network as a whole. But with lossy, low-impedance feedlines like the commonly used 50 Ohm [coaxial cable](#), maximum power transfer only occurs if matching is done at the antenna in conjunction with a matched transmitter and feedline, producing a match at both ends of the line.

In any case, regardless of its placement, an ATU does not alter the gain, efficiency, or directivity of the antenna, nor does it change the internal complex impedance of the antenna itself.


Efficiency and SWR

If there is still a high [standing wave ratio \(SWR\)](#) in the feedline beyond the ATU, any loss in that part of the feedline is typically increased by the transmitted waves reflecting back and forth between the tuner and the antenna, causing resistive losses in the wires and possibly the insulation of the transmission line. Even with a matching unit at both ends of the feedline – the near ATU matching the transmitter to the feedline and the remote ATU matching the feedline to the antenna – losses in the circuitry of the two ATUs will slightly reduce power delivered to the antenna.

Hence, operating an antenna far from its design frequency and compensating with an ATU between the transmitter and the feedline is not as efficient as using a [resonant](#) antenna with a [matched-impedance](#) feedline, nor as efficient as a matched feedline from the transmitter to a remote antenna tuner attached

directly to the antenna.

Transmatch Schematic Circuit

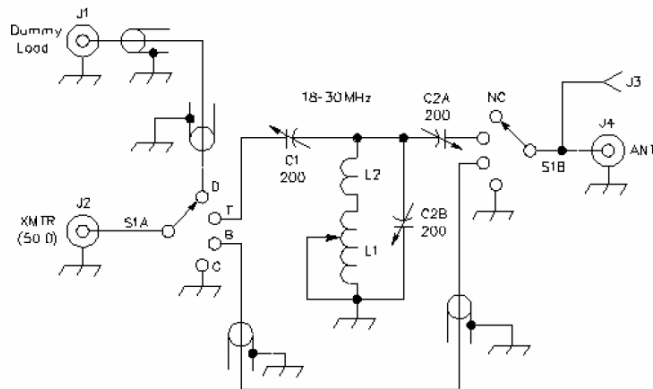

Al Penney
VO1NO

This configuration is currently popular because it is capable of matching a large impedance range with capacitors in commonly available sizes. However, it is a **high-pass filter** and will not attenuate spurious radiation above the **cutoff frequency** nearly as well as other designs. Due to its low losses and simplicity, many home-built and commercial manually tuned ATUs use this circuit. The **tuning coil** is also adjustable.

Yagi-Uda Antenna

- Driven Element, Reflector and one or more Directors (AKA **Parasitic Elements**) give gain and directivity.
- Advantages:
 - Effective antenna;
 - Easily rotated;
 - Can be multi-band; and
 - Can be stacked for more gain.
- Disadvantages:
 - Can be expensive;
 - Requires a tower and rotator;
 - Single bearing at a time; and
 - Wind and ice an enemy!

Al Penney
VO1NO


A **Yagi–Uda antenna**, commonly known as a **Yagi antenna**, is a **directional antenna** consisting of multiple parallel elements in a line, usually **half-wave dipoles** made of metal rods. Yagi–Uda antennas consist of a single **driven element** connected to the **transmitter** or **receiver** with a **transmission line**, and additional "**parasitic elements**" which are not connected to the transmitter or receiver: a so-called **reflector** and one or more **directors**. It was invented in 1926 by **Shintaro Uda** of **Tohoku Imperial University, Japan**, and (with a lesser role played by his colleague) **Hidetsugu Yagi**.

The reflector element is slightly longer than the driven dipole, whereas the directors are a little shorter. The parasitic elements absorb and reradiate the radio waves from the driven element with a different **phase**, modifying the dipole's **radiation pattern**. The waves from the multiple elements **superpose** and **interfere** to enhance radiation in a single direction, achieving a very substantial increase in the antenna's **gain** compared to a simple dipole.

Also called a "beam antenna", or "parasitic array", the Yagi is very widely used as a high-gain antenna on the **HF**, **VHF** and **UHF** bands. It has moderate to high **gain** which depends on the number of elements used, typically limited to about 20 **dBi**, **linear polarization**, unidirectional (end-fire) beam pattern with

high [front-to-back ratio](#) of up to 20 db. and is lightweight, inexpensive and simple to construct. The [bandwidth](#) of a Yagi antenna, the [frequency](#) range over which it has high gain, is narrow, a few percent of the center frequency, and decreases with increasing gain, so it is often used in fixed-frequency applications. The largest and best-known use is as rooftop terrestrial [television antennas](#), but it is also used for point-to-point fixed communication links, in radar antennas, and for long distance [shortwave](#) communication by shortwave broadcasting stations and [radio amateurs](#).

Yagi-Uda Antenna

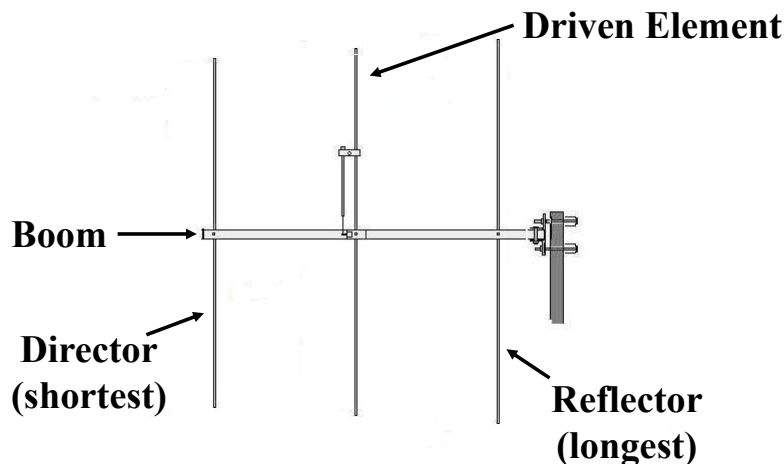

Al Penney
VO1NO


The Yagi–Uda antenna consists of a number of parallel thin rod elements in a line, usually approximately half-wave long, typically supported on a perpendicular crossbar or "boom" along their centers. There is a single **driven element** driven in the center (consisting of two rods each connected to one side of the transmission line), and a variable number of **parasitic elements**, a single *reflector* on one side and optionally one or more *directors* on the other side. The parasitic elements are not electrically connected to the transmitter or receiver, and serve as **passive radiators**, reradiating the radio waves to modify the **radiation pattern**. Typical spacings between elements vary from about $\frac{1}{10}$ to $\frac{1}{4}$ of a wavelength, depending on the specific design. The directors are slightly shorter than the driven element, while the reflector(s) are slightly longer. The **radiation pattern** is unidirectional, with the **main lobe** along the axis perpendicular to the elements in the plane of the elements, off the end with the directors.

Conveniently, the dipole parasitic elements have a **node** (point of zero **RF voltage**) at their centre, so they can be attached to a conductive metal support at that point without need of insulation, without disturbing their electrical operation. They are usually bolted or welded to the antenna's central support boom. The driven element is fed at centre so its two halves must be


insulated where the boom supports them.

The gain increases with the number of parasitic elements used. Only one reflector is used since the improvement of gain with additional reflectors is negligible, but Yagis have been built with up to 30–40 directors.^[3]

3 Element Yagi-Uda Antenna

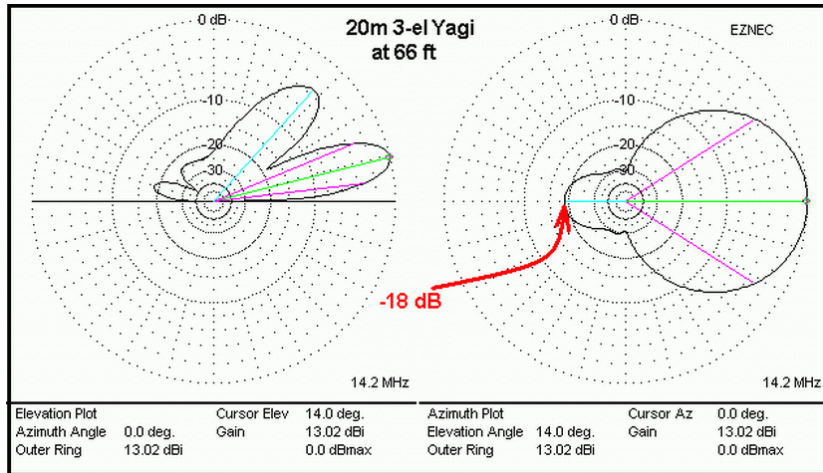

Al Penney
VO1NO

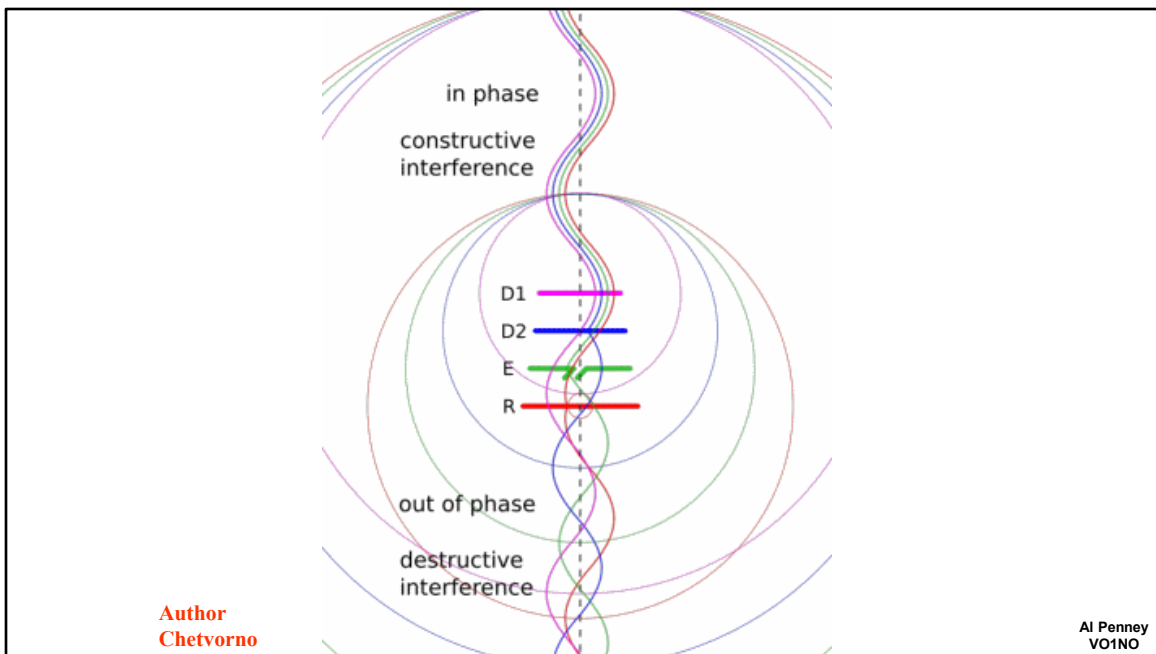


Animation showing how a Yagi-Uda antenna works. It consists of 4 half-wave dipole antennas in a line; a driven element (E) which is connected to the transmitter and radiates the radio waves, and 3 parasitic elements, two directors ($D1$, $D2$) and one reflector (R) which act as resonators, absorbing and reradiating the waves from the driven element with a different phase. The radio waves from all 4 elements combine and interfere, increasing the power radiated in the desired direction (*up*) and decreasing the power radiated in other directions. The radio waves from each individual element (*wavy moving lines*) are shown in a different color. The waves in the forward direction are in phase, and interfere constructively, adding together to produce a higher signal strength, while the waves in the reverse direction are out of phase, partially canceling each other to produce lower signal strength in that direction.

Wide Element Spacing on Yagi-Uda

- **Spacing** the elements **further apart** (within reason) on a Yagi-Uda antenna gives three advantages:
 - **Greater Gain;**
 - **Less critical tuning; and**
 - **Wider bandwidth.**
- Computer programs exist that will **optimize element spacing and lengths** to provide **maximum performance** (**0.2 wavelength spacing** is close to **optimum** for a **3-element** Yagi-Uda).

Al Penney
VO1NO

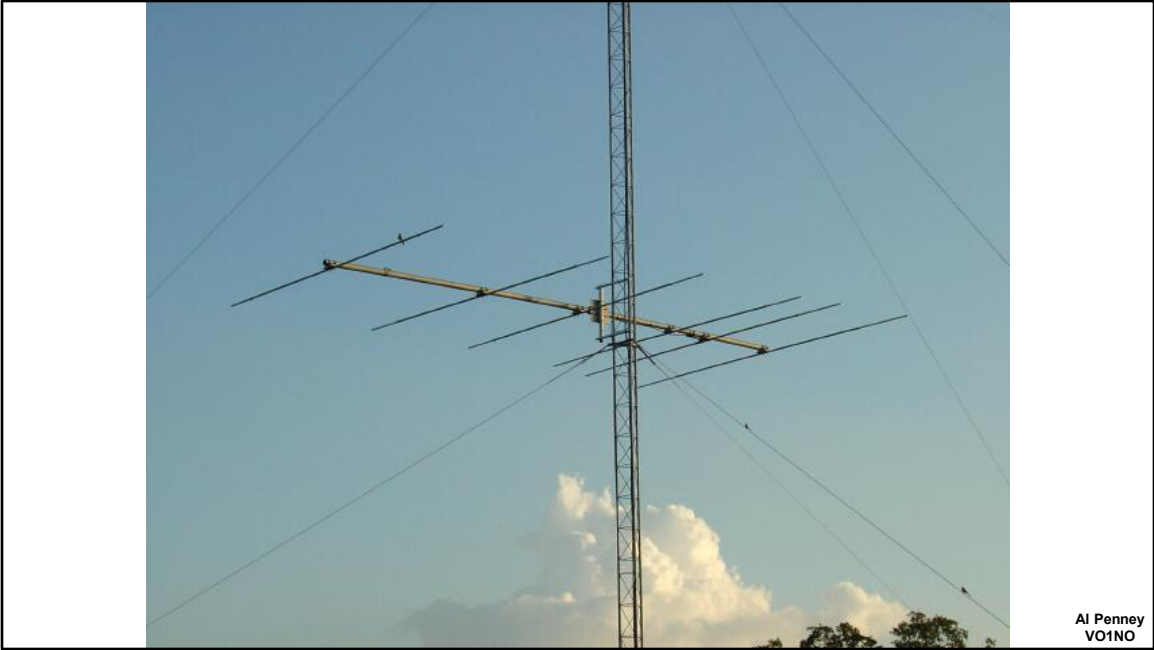

Al Penney
VO1NO

Trapped Yagi-Uda

- Just as with dipoles, Yagi-Uda antennas can employ traps to enable the antenna to function on several different bands.
- All elements must use traps – the Driven Element, Reflector and Directors.



Al Penney
VO1NO

Yagi-Uda antennas used for [amateur radio](#) are sometimes designed to operate on multiple bands. These elaborate designs create electrical breaks along each element (both sides) at which point a parallel [LC](#) (inductor and capacitor) circuit is inserted. This so-called *trap* has the effect of truncating the element at the higher frequency band, making it approximately a half wavelength in length. At the lower frequency, the entire element (including the remaining inductance due to the trap) is close to half-wave resonance, implementing a *different* Yagi-Uda antenna. Using a second set of traps, a "triband" antenna can be resonant at three different bands. Given the associated costs of erecting an antenna and rotor system above a tower, the combination of antennas for three amateur bands in one unit is a very practical solution. The use of traps is not without disadvantages, however, as they reduce the bandwidth of the antenna on the individual bands and reduce the antenna's electrical efficiency and subject the antenna to additional mechanical considerations (wind loading, water and insect ingress).



Three element Triband antenna (covers 10, 15 and 20 meter bands).



Another triband Yagi (10, 15, 20M), but this one has an extra trap and capacitive loading hats on the driven element to give 40M coverage as a rotatable dipole only – no director or reflector on 40M.


Cubical Quad

- Uses closed loops of approximately **1 wavelength**.
- Driven Element, Reflector and one or more Directors.
- Advantages:
 - Effective, has gain and directivity;
 - Easily rotated;
 - Multiband; and
 - Lighter than a Yagi-Uda.
- Disadvantages:
 - Weaker than a Yagi-Uda, 3D antenna;
 - Requires a tower and rotator;
 - Single bearing only;
 - Wind and Ice!




Al Penney
VO1NO

A **quad antenna** is a type of **directional** wire radio **antenna** used on the **HF** and **VHF** bands. Like a **Yagi-Uda antenna** ("Yagi"), a quad consists of a driven element and one or more **parasitic elements**; however in a quad, each of these elements is a **loop antenna**, which may be square, round, or some other shape. It is used by **radio amateurs** on the HF and VHF amateur bands.

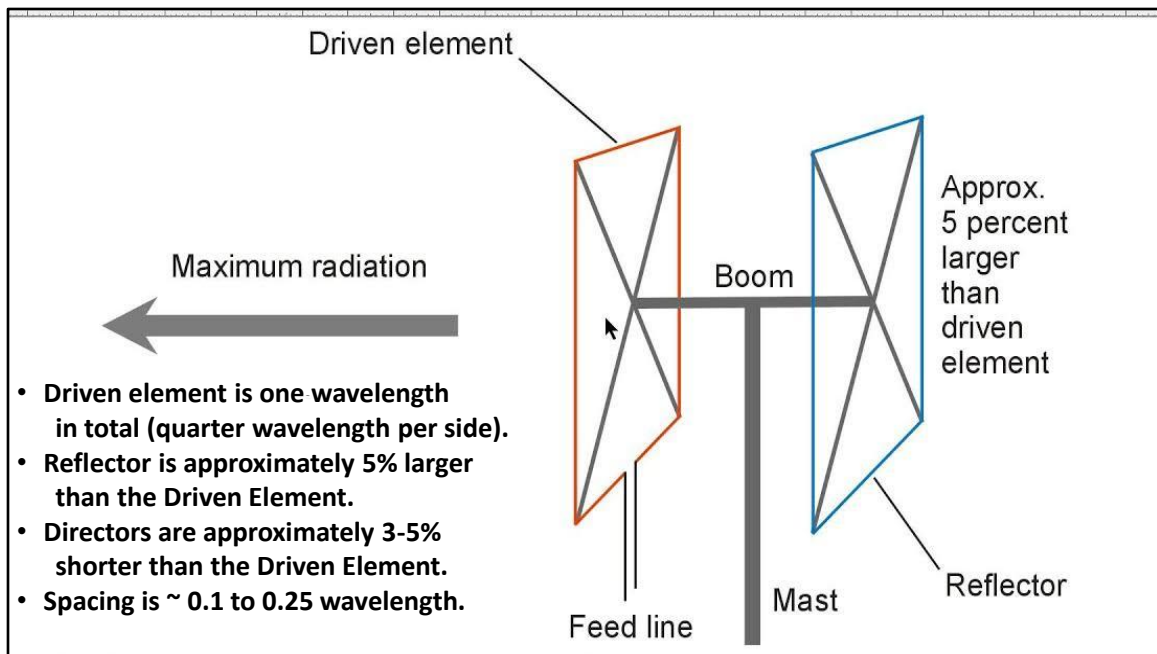


2 Element Cubical Quad

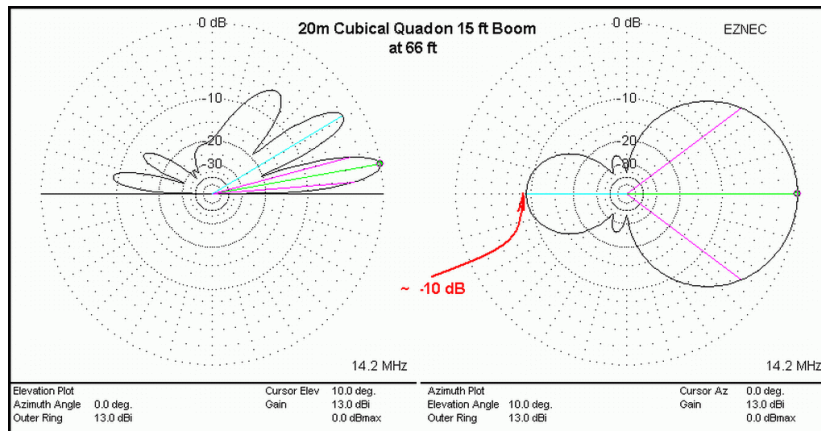



3 Element Cubical Quad

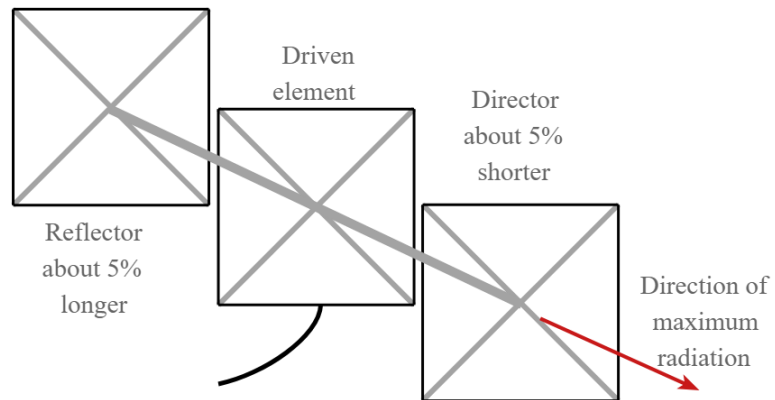


Al Penney
VO1NO

Cubical Quad Notes

- In general, the performance of a **2-element Cubical Quad** compares to a **3-element Yagi-Uda antenna**.
- **Cubical Quad polarization:**
 - Feedpoint on side **parallel** to ground: **Horizontal**
 - Feedpoint on side **perpendicular** to ground: **Vertical**
- The elements of a Quad can also be **shaped as triangles**, and called a **Delta Quad**.

Al Penney
VO1NO


Delta Quad

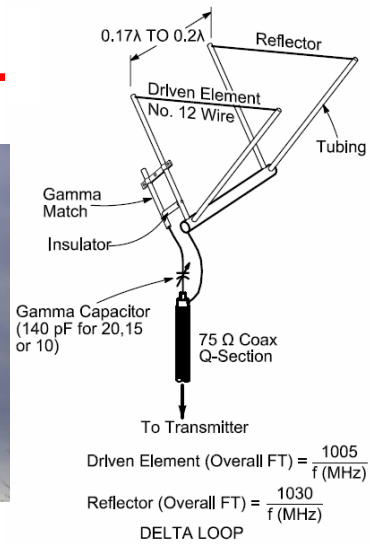

Al Penney
VO1NO

Full Wavelength Loop Polarization

- Polarization depends on location of feedpoint

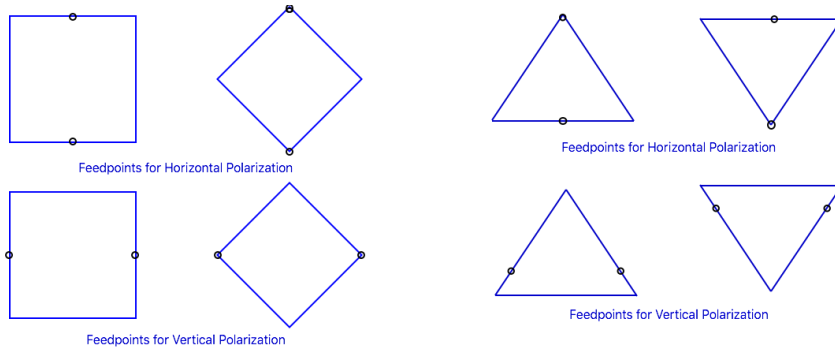

Al Penney
VO1NO


Effect of feedpoint position

The position of the feedpoint around the loop determines the polarization. Feeding the loop at the bottom or the top gives horizontal polarization. Feeding it in the center of one side, so the current minima are at the top and bottom centers, gives vertical polarization. With some loop shapes the required feedpoint position might not be exactly at a corner or in the middle of a side: for example, with an equilateral triangle with the base down and one corner up, the feedpoint for vertical polarization is $1/4$ of the wire length down from the top corner, which will be a little ways up from the bottom corner.

In general for any balanced loop, current is maximum at the point opposite the feedpoint. In this case, when the conductor is a full wavelength, there is a second current maximum at the feedpoint.

Quarter Wave Verticals

- Can be wire, tubular, or tower.
- Some describe them as limited space antennas, **BUT** you must consider the radial field.
- Offers a low angle of radiation if you can't put a dipole at $\frac{1}{2} \lambda$ (125 feet on 80M!).
- **Loading coils (inductors) in series** with radiating element will **lower** resonant frequency by **cancelling capacitive reactance**.

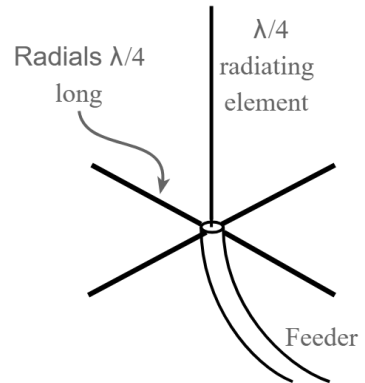

Al Penney
VO1NO

$\frac{1}{4}$ Wavelength Vertical

- **Omnidirectional.**
- Requires a good ground (radials, groundplane).
- Can use **loading coils** or capacity hats to reduce height.
- **Advantages:**
 - Little space (?), easily disguised;
 - Omnidirectional, good groundwave coverage;
 - Low angle of radiation (with a good ground).
- **Disadvantages:**
 - Omnidirectional;
 - Good ground an absolute must; and
 - Susceptible to man-made noise.




Al Penney
VO1NO

THE VERTICAL MONOPOLE

So far in this discussion on Antenna Fundamentals, we have been using the free-space, center-fed dipole as our main example. Another simple form of antenna derived from a dipole is called a *monopole*. The name suggests that this is one half of a dipole, and so it is.

Quarter Wave Verticals

<http://www.qsl.net/va3iul>

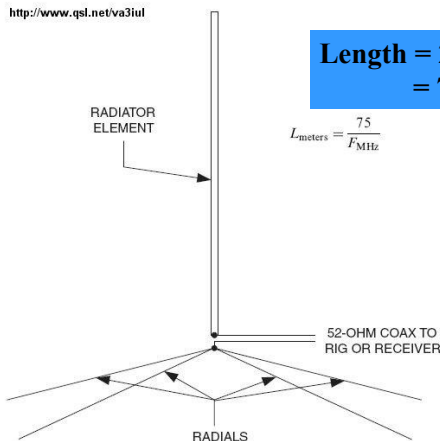

$$\text{Length} = 234/F \text{ (MHz) Feet}$$

$$= 71.5/F \text{ (MHz) Meters}$$

$$L_{\text{meters}} = \frac{75}{F_{\text{MHz}}}$$


Band	Freq	Height	
		Feet	Meters
160M	1.800	130.0	39.72
	1.850	126.5	38.65
	1.900	123.2	37.60
	1.950	120.0	36.67
80M	3.500	66.9	20.43
	3.600	65.0	19.86
	3.700	63.2	19.32
	3.800	61.6	18.82
	3.900	60.0	18.33
	4.000	58.5	17.88
60M	5.358	43.7	13.34
40M	7.000	33.4	10.21
	7.100	33.0	10.07
	7.200	32.5	9.93

Al Penney
VO1NO

Heights are approximate. Actual height depends on diameter of radiator.

The monopole is always used in conjunction with a *ground plane*, which acts as a sort of electrical mirror. The *image antenna* for the monopole is the dotted line beneath the ground plane. The image forms the “missing second half” of the antenna, transforming a monopole into the functional equivalent of a dipole. From this explanation you can see where the term *image plane* is sometimes used instead of ground plane.

Image Antenna

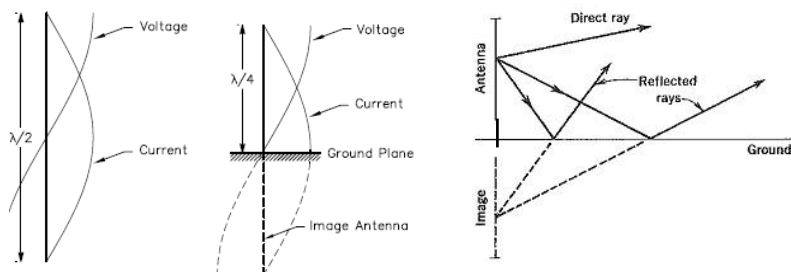

NOTE: Effective depth of the antenna ground plane will vary with the soil/season/weather, and could range from several cm to as deep as two meters below the surface.

Al Penney
VO1NO

The monopole is always used in conjunction with a *ground plane*, which acts as a sort of electrical mirror. See **Fig 20**, where a $\lambda/2$ dipole and a $\lambda/4$ monopole are compared. The *image antenna* for the monopole is the dotted line beneath the ground plane. The image forms the “missing second half” of the antenna, transforming a monopole into the functional equivalent of a dipole. From this explanation you can see where the term *image plane* is sometimes used instead of ground plane. Although we have been focusing throughout this chapter on antennas in free space, practical monopoles are usually mounted vertically with respect to the surface of the ground. As such, they are called *vertical monopoles*, or simply *verticals*.



A practical vertical is supplied power by feeding the radiator against a ground system, usually made up of a series of paralleled wires radiating from and laid out in a circular pattern around the base of the antenna. These wires are termed *radials*.

Keep in mind that these discussions of height above earth ground refer to the height of the *electrical* ground, not the sod. Depending upon ground conductivity and groundwater


content, the effective height of earth ground may lie some distance beneath the surface. The actual depth is best found from experimentation and may, unfortunately, vary with precipitation and with the season—especially if the ground freezes and/or the local water table changes greatly.

$\frac{1}{4}$ Wavelength Vertical

- **Theoretical** impedance is $\frac{1}{2}$ that of a dipole, ie: approximately 36 ohms.
- By **sloping radials** down however, impedance can be brought **closer to 50 ohms**, providing a better match to 50-ohm coax cable.

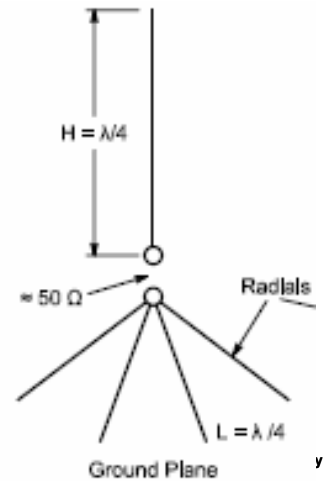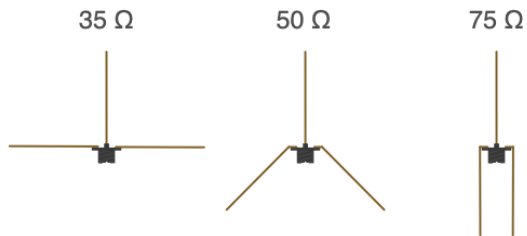

Ground Plane Vertical

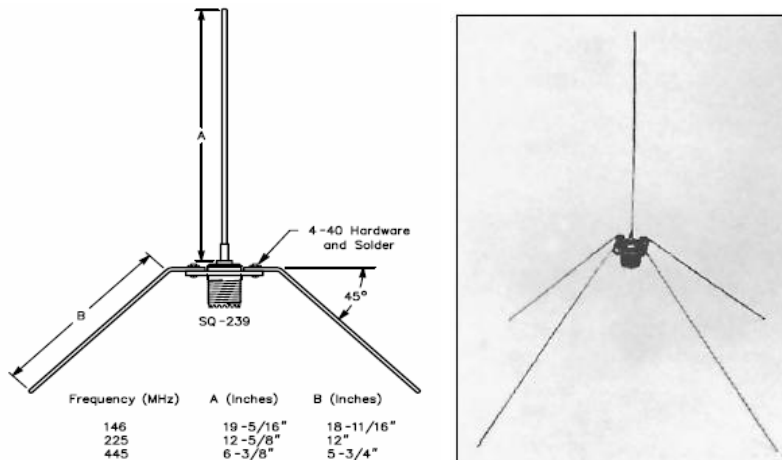

Al Penney
VO1NO

A very simple method of construction, shown in Figs 25 and 26, requires nothing more than an SO-239 connector and some #4-40 hardware. A small loop formed at the inside end of each radial is used to attach the radial directly to the mounting holes of the coaxial connector. After the radial is fastened to the SO-239 with #4-40 hardware, a large soldering iron or propane torch is used to solder the radial and the mounting hardware to the coaxial connector. The radials are bent to a 45° angle and the vertical portion is soldered to the center pin to complete the antenna. The antenna can be mounted by passing the feed line through a mast of 3/4-inch ID plastic or aluminum tubing. A compression hose clamp can be used to secure the PL-259 connector, attached to the feed line, in the end of the mast.




Homebrew 40M vertical by YF1AR using a wire attached to a fiberglass mast.

Homebrew 40M vertical by VO1FOIX using tent poles.

80M vertical antenna by W8JI, made of Rohn 65 tower sections.

Wire Quarter Wave Vertical

- Use a high tree to support a quarter wave wire vertical.
- Use an SO-239 at the feedpoint.
- 30 x quarter wavelength ground or buried radials should be plenty.
- 60 radials is more than enough.
- A vertical on the low bands provides **low-angle radiation** that is difficult to achieve with horizontal antennas below $\frac{1}{2}$ wavelength in height.

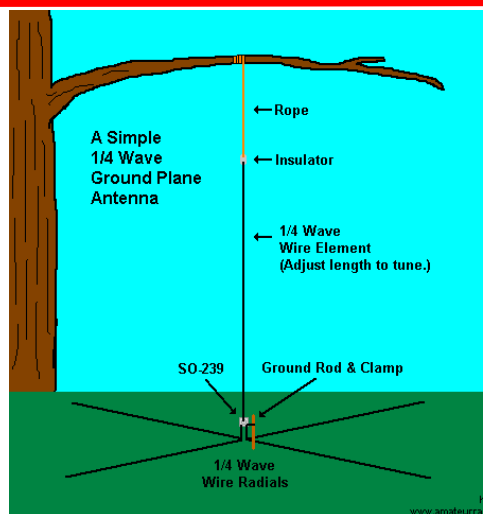

Al Penney
VO1NO

Can make a vertical from wire suspended from a tree. This is easily done for 40M, and may be possible for an 80M antenna.

Number of Radials...

- 30 x $\frac{1}{4} \lambda$ ground or buried radials should be plenty.
- 60 x $\frac{1}{4} \lambda$ ground or buried radials = point of diminishing return.
- Use at least 8 elevated $\frac{1}{4} \lambda$ radials – more is better.
- Given practical considerations, I recommend ground or buried radials instead of elevated.



Al Penney
VO1NO

16 radials would give acceptable results, but 30 would be better. Elevated radials can be tricky. While 2 elevated radials can work, it is difficult to obtain equal currents, reducing their effectiveness. People who have studied the issue recommend at least 8 elevated radials to ensure that current imbalances are not a problem. Given the practical difficulties in trying to keep them in the air without strangling someone, I recommend surface or lightly buried radials instead.

Trapped Vertical Antenna


- Just as with dipoles and Yagi-Uda antennas, traps can be added to verticals to give multiband capability.
- This example is a Cushcraft R7 vertical, covering 40m thru to 10M.



VO1NO

5/8 Vertical

- Often used for VHF/UHF mobile antennas.
- (Supposedly) offers close to 3 dB more gain at lower elevations than a 1/4 Lambda whip.
- Matching coil at base.

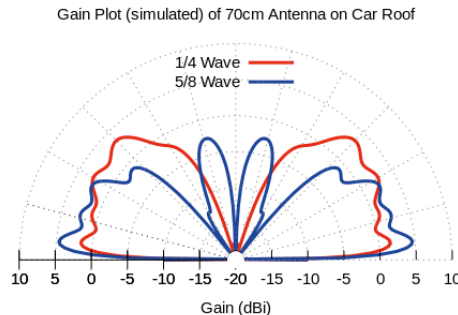

Al Penney
VO1NO

Although the quarter wavelength vertical antenna provides a good level of performance, it is easy to obtain some additional gain by extending the radiating element of the vertical antenna to five eighths of a wavelength, $5\lambda/8$.

As a result the five eighths wavelength vertical is used in many instances. Using this antenna, more power is radiated at a low angle of radiation, enabling gain to be obtained in the required plane.

Although the five eighths wavelength vertical antenna can be used in many applications, one particular area where it is used is with mobile radio communications. For many frequencies the additional length is not a problem, and it provides additional gain at little increase in cost.

Five eighths wavelength antenna concept

The concept for the five eighths wavelength vertical antenna starts with the quarter wavelength antenna.

It is found that by extending the length of the vertical element, the amount of power radiated at a low angle is increased. If a half wave dipole is extended in length the radiation at right angles to the antenna starts to increase before finally splitting into several lobes. The maximum level of radiation at right angles to the antenna is achieved when the dipole is

about 1.2 times the wavelength.

As a vertical monopole antenna is half the length of a dipole, this equates to about a five eighths wavelength vertical monopole antenna.

$5\lambda/8$ vertical antenna gain

When used as a vertical radiator against a ground plane this translates to a length of $5/8$ wavelength. It is found that a five eighths wavelength vertical antenna has a gain of close to 4 dBd, i.e. 4 dB gain over a dipole.

To achieve this gain the antenna must be constructed of the right materials so that losses are reduced to the absolute minimum and the overall performance is maintained, otherwise much of the advantage of using the additional length will be lost.

Antenna impedance & matching

For most applications, it is necessary to ensure that the antenna provides a good match to 50Ω coaxial cable.

It is found that a $3/4$ wavelength vertical element provides a good match, and therefore one solution for providing a good impedance match for the $5/8$ wavelength vertical antenna is to make it appear as a $5/8$ radiator but have the electrical length of a $3/4$ element. In this way it radiates like a $5\lambda/8$ radiator, but has the impedance of a $3\lambda/4$ antenna.

This is achieved by placing a small loading coil at the base of the antenna to increase its electrical length.

5/8 Vertical Reality (Not for Exam!)

- In reality, the 5/8 pattern is based on an infinitely large ground plane, not a car roof!
- Actual advantage is less than claimed, and due mainly to increased height – easier to “see” distant repeaters.
- In general, try to center your mobile antenna (of any type) on the metal roof to ensure an omnidirectional pattern on the horizon.

Al Penney
VO1NO

The smaller the roof and/or the less centered the antenna, the less gain advantage for a 5/8th wave. This occurs because 5/8th wave antennas develop gain from ground reflections.

Lower height roofs also have less gain difference, and shape of the roof greatly affects pattern and gain.


The 2.85dB theoretical gain is only for a perfect lossless loading coil antenna over perfect infinite flat ground plane.

In the real world the actual gain difference between a 1/4 wave antenna and a 5/8th wave can be anywhere from no gain or a very slight loss up to a maximum of 2dB gain over a 1/4 wave. The 5/8th wave is never really worse, explaining why people have no problems using them. This is true for any repeater antenna height. The primary advantage of a 5/8th wave in mobile operation is increased antenna height, not from an actual gain increase.

The further from ground, the less advantage a 5/8th wave has.

End Fed Halfwave Antenna

- Popular **multi-band antenna**, especially for portable operations and apartment dwellers.
- Uses **64:1 or 49:1 transformer** to match 50 ohm coax to high impedance at the antenna feedpoint.
- **Transformer can be lossy!**

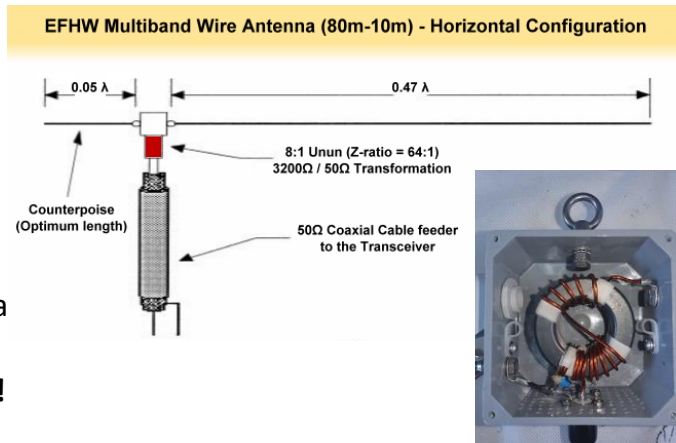

Al Penney
VO1NO

The end fed half wave antenna is an attractive option for many radio hams as it is able to provide multiband operation without the use of traps or stubs whilst occupying a minimum amount of space and not presenting a very ugly visual impact.

A broad-band matching network is typically used to transform the high impedance of the EFHW feed point to 50 Ω suitable for standard coax cable.

The end fed half wave antenna can be operated with a small counterpoise, and in some instances, no counterpoise is used at all, although this is not necessarily wise. The lower end of the antenna may also be grounded as an alternative to reduce static noise.

Being a single wire, and end fed it is very easy to set up, often taking only minutes to do and this makes it ideal for ham radio portable operation, as well as for base station usage.

We are all familiar with a centre fed half wave dipole antenna. In free space this presents an impedance of 72 Ω to the feeder and this means that it provides a relatively good match to 50 Ω coax cable, especially when the proximity of the ground


and other objects will tend to reduce the feed impedance.

When the feeder is connected to the end of a half-wave antenna, the situation is quite different. Here the feed impedance is very much higher, and to enable a good match to be made to 50Ω coax which is normally used a matching device is required, otherwise there will be a discontinuity and power will be reflected.

To provide the match at this point a transformer is normally used and this gives an impedance transformation. Typically the matching transformer transforms the impedance from the value of around 4,000 or 5,000 Ω at the EFHW antenna feed point down to the 50Ω value of the coaxial feeder.

The end fed half wave antenna is also able to provide multi-band operation. It can be used on all odd and even harmonics of the fundamental frequency, presenting the same high impedance at these frequencies.

End Fed Halfwave Antenna

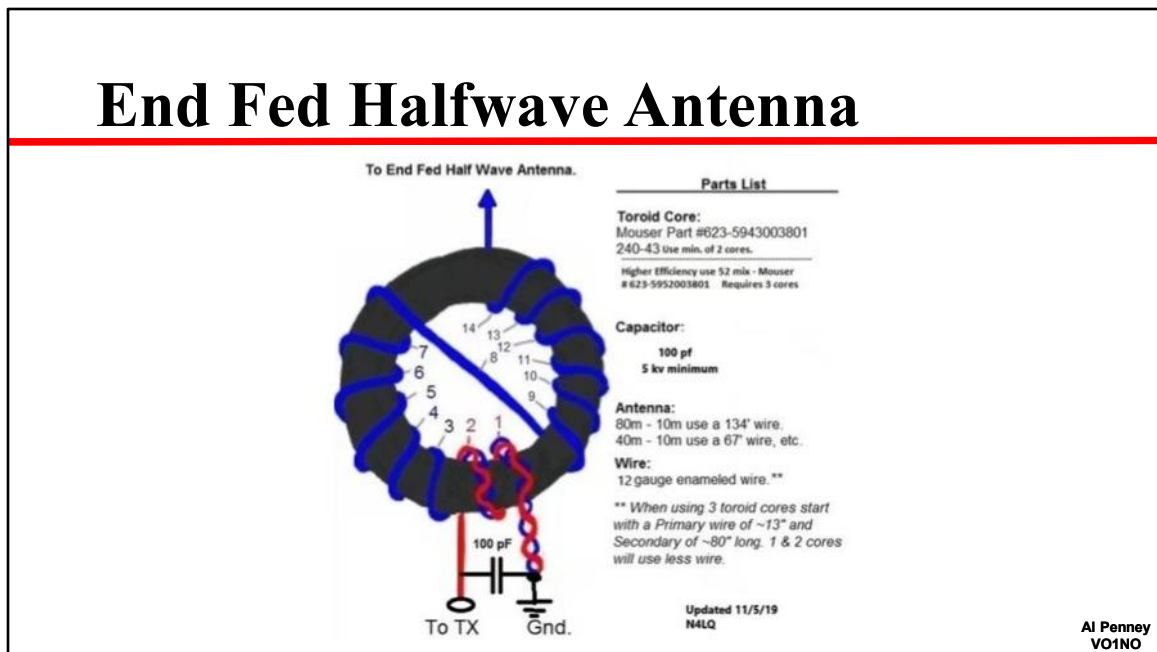

The end fed half wave antenna is an attractive option for many radio hams as it is able to provide multiband operation without the use of traps or stubs whilst occupying a minimum amount of space and not presenting a very ugly visual impact.

A broad-band matching network is typically used to transform the high impedance of the EFHW feed point to 50Ω suitable for standard coax cable.

The end fed half wave antenna can be operated with a small counterpoise, and in some instances, no counterpoise is used at all, although this is not necessarily wise. The lower end of the antenna may also be grounded as an alternative to reduce static noise.

Being a single wire, and end fed it is very easy to set up, often taking only minutes to do and this makes it ideal for ham radio portable operation, as well as for base station usage.

We are all familiar with a centre fed half wave dipole antenna. In free space this presents an impedance of 72Ω to the feeder and this means that it provides a relatively good match to 50Ω coax cable, especially when the proximity of the ground

and other objects will tend to reduce the feed impedance.

When the feeder is connected to the end of a half-wave antenna, the situation is quite different. Here the feed impedance is very much higher, and to enable a good match to be made to 50Ω coax which is normally used a matching device is required, otherwise there will be a discontinuity and power will be reflected.

To provide the match at this point a transformer is normally used and this gives an impedance transformation. Typically the matching transformer transforms the impedance from the value of around 4,000 or 5,000 Ω at the EFHW antenna feed point down to the 50Ω value of the coaxial feeder.

The end fed half wave antenna is also able to provide multi-band operation. It can be used on all odd and even harmonics of the fundamental frequency, presenting the same high impedance at these frequencies.

Other interesting antennas...

Al Penney
VO1NO

Log Periodic Antennas

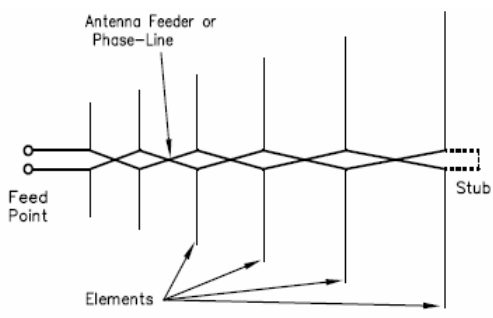


Fig 1—The basic components of a log periodic dipole array (LPDA). The forward direction is to the left in this sketch. Many variations of the basic design are possible.

Al Penney
VO1NO

A log periodic antenna is a system of driven elements, designed to be operated over a wide range of frequencies. Its advantage is that it exhibits essentially constant characteristics over the frequency range—the same radiation resistance (and therefore the same SWR), and the same pattern characteristics (approximately the same gain and the same front-to-back ratio). Not all elements in the system are active on a single frequency of operation; the design of the array is such that the active region shifts among the elements with changes in operating frequency.

Several varieties of log periodic antenna systems exist, such as the zig-zag, planar, trapezoidal, slot, V, and the dipole. The type favored by amateurs is the log-periodic dipole array, often abbreviated

LPDA. The LPDA, shown in **Fig 1**, was invented by [D. E. Isbell](#) at the University of Illinois in 1958. Similar to a Yagi antenna in construction and appearance, a log-periodic dipole array may be built as a rotatable system for all the upper HF bands, such as 18 to 30 MHz. The longest element, at the rear of the array, is a half wavelength at the lower design frequency. Depending on its design parameters, the LPDA can be operated over a range of frequencies having a ratio of 2:1 or higher. Over this range its electrical

characteristics—gain, feed-point impedance, front-to back ratio, and so forth—remain more or less constant.

As may be seen in Fig 1, the log periodic array consists of several dipole elements which are each of different lengths and different relative spacings. A distributive type of feeder system is

used to excite the individual elements. The element lengths and relative spacings, beginning from the feed point for the array, are seen to increase smoothly in dimension, being greater for

each element than for the previous element in the array. It is this feature upon which the design of the LPDA is based, and which permits changes in frequency to be made without greatly affecting the electrical operation. With changes in operating frequency, there is a smooth transition along the array of the elements which comprise the active region.


Feedpoint impedance is approximately 200 ohms, so it can be fed using a 4:1 balun and 50 ohm coax.



LPDA at Naval Radio Station Newport Corner

Log Periodic Current Distribution

Copyright - Basu (VU2NSB)

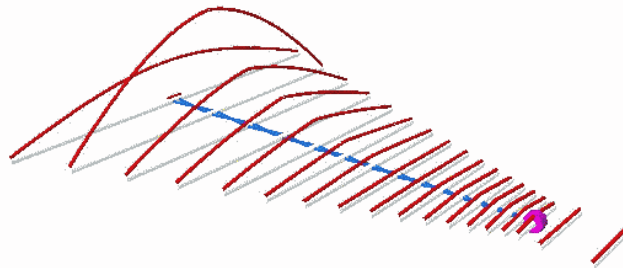


6 MHz

Al Penney
VO1NO

Unlike a Yagi where all elements contribute to its forward gain across a narrow band around its design frequency, most of the elements of the LPDA are inactive while only a few elements that are resonant near the frequency of RF excitation are active at any point in time. Usually, 3 elements or perhaps a few more (depending on the design) may be active at a time. As we sweep the excitation frequency across the wide operating bandwidth of the LPDA from low to high, we will notice that the set of elements that become active will shift from the longest element and gradually shift towards smaller length elements till the shortest element finally becomes the one that is active at the highest frequency end of the antenna bandwidth. The transition from one set of the active element to another is usually smooth and seamless.


One may visualize it like a sprint medley relay race where one athlete hands over the baton to the next, while still running, in a smooth manner, without discontinuity or stoppage. In the case of the LPDA, with the change in excitation frequency, the transition from one set of active elements to the next is also discontinuous

with a smooth rollover.

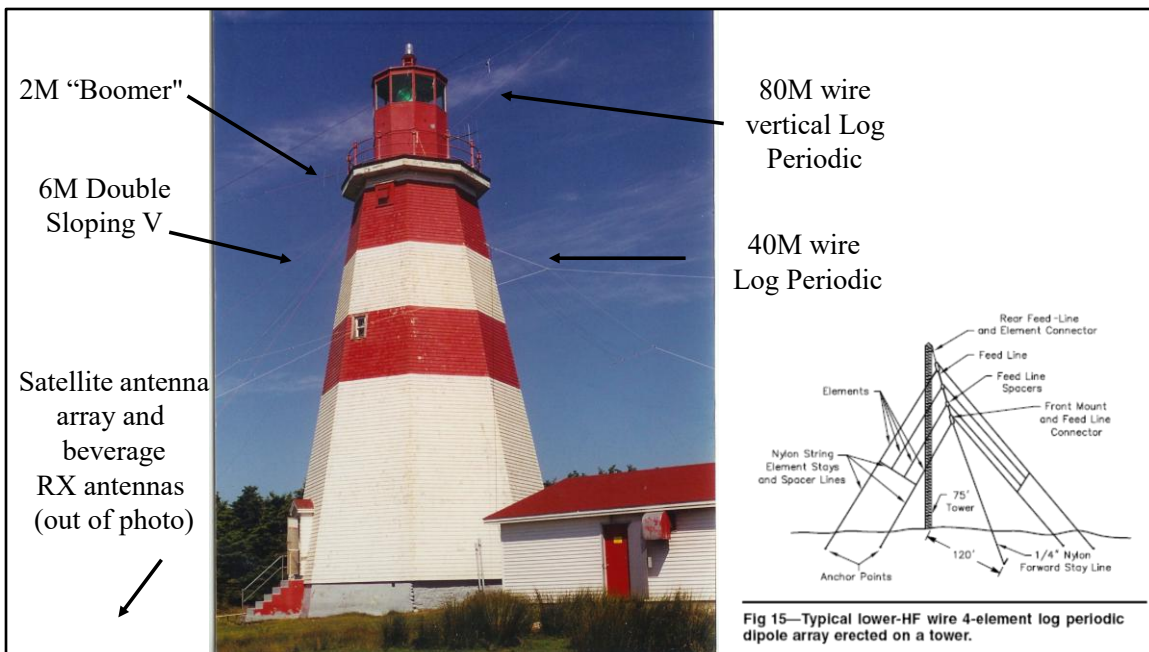

Two log periodic antennas (and other types) I used on Seal Island for an IOTA expedition.

Tape Measure Yagi

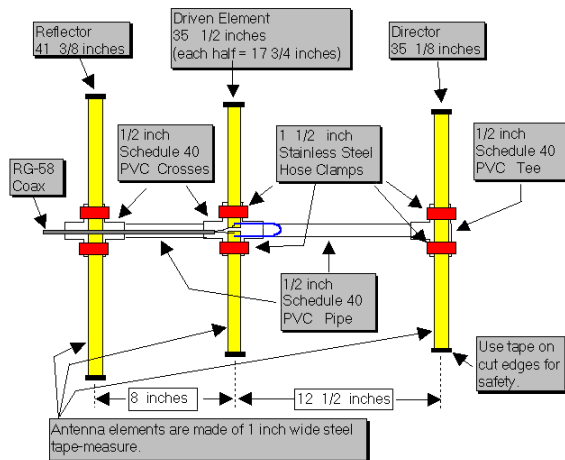



Al Penney
VO1NO

<https://www.instructables.com/id/The-Tape-Measure-Antenna/>

<https://www.youtube.com/watch?v=BmHoQrDfw-0>

Inverted L Antenna

- Basically a folded over $\lambda/4$ vertical
- Horizontal section provides top-loading for ver
- Non-symmetrical shape results in the vector su horizontally polarized radiation, and some high
- A good radial system is necessary

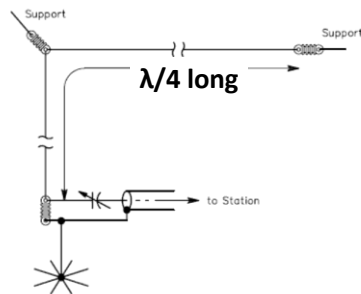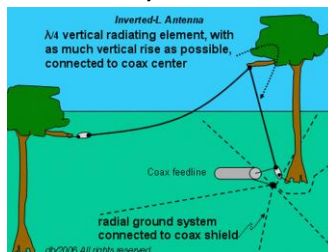

Al Penney
VO1NO

Inverted-L Antennas

The antenna shown is called an inverted-L antenna. It is simple and easy to construct and is a good antenna for the beginner or the experienced 1.8-MHz DXer. Because the overall

electrical length is made somewhat greater than $\lambda/4$, the feed-point resistance is on the order of 50 ohm, with an inductive reactance. That reactance is canceled by a series capacitor as indicated in the figure. For a vertical section length of 60 feet and a horizontal section length of 125 feet, the input impedance is $\approx 40 + j 450 \Omega$.

Longer vertical or horizontal sections would increase the input impedance. The azimuthal radiation pattern is slightly asymmetrical with ≈ 1 to 2 dB increase in the direction opposite to the horizontal wire.


This antenna requires a good buried ground system or elevated radials. This antenna is a form of top-loaded vertical, where the top loading is asymmetrical. This

results

in both vertical and horizontal polarization because the currents in the top wire do not cancel like they would in a symmetrical-T vertical. This is not necessarily a bad thing because it eliminates the zenith null present in a true vertical. This allows for good communication at short ranges as well as for DX.

Inverted L Antenna

- A tip - Make overall length longer than $\lambda/4$ to bring feedpoint impedance close to 50 ohms with inductive reactance
- Capacitor at feedpoint cancels the inductive reactance
- A good length for 160M band is 165 to 175 feet
- Make vertical section as high as possible
- Use an RF choke at the feedpoint to prevent current on outside of braid

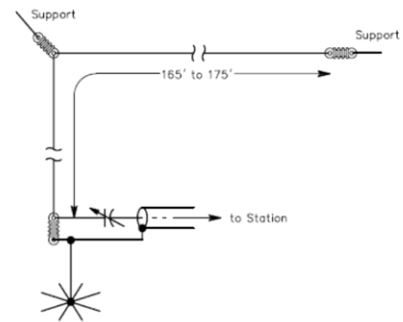

Al Penney
VO1NO

Temporary Inverted L at VO1NO



Al Penney
VO1NO


I installed a temporary Inverted L for the 2024 CQWW 160M SSB Contest. It consists of a piece of wire 130 feet long, with 55 feet hung vertically from the tower, and the rest extending out to a support pole. I used an RF choke at the feedpoint, made by coiling 20 turns of RG-213 around a piece of 4" plastic pipe. I attached radial wires at the base – 10 full size quarter wavelength radials, and about 50 shorter wires. It worked quite well for a simple antenna – I worked stations all over North America and Europe, and as far away as Hawaii and Israel.

T Antenna

- Similar to an Inverted L, but the vertical section is attached in the center of the horizontal section
- Current in top section are equal but opposite
- Top section radiates no power, so radiation is vertically polarized
- Good radial system is required
- Excellent antenna for 160 and 80M
- RMS Titanic had two such antennas.



Al Penney
VO1NO

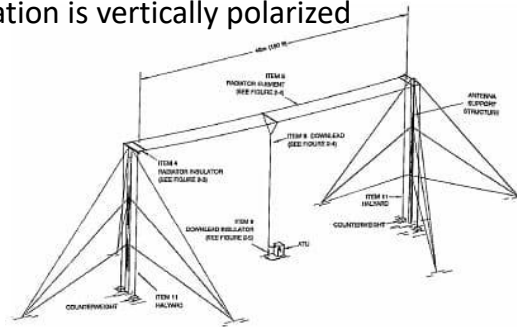


The left and right sections of horizontal wire across the top of the 'T' carry equal but oppositely-directed currents. Therefore, far from the antenna, the radio waves radiated by each wire are 180° out of phase with the waves from the other wire, and tend to cancel. There is a similar cancellation of radio waves reflected from the ground. Thus the horizontal wires radiate (almost) no radio power.

Instead of radiating, the horizontal wires increase the capacitance at the top of the antenna. More current is required in the vertical wire to charge and discharge this added capacitance during the RF oscillation cycle. The increased currents in the vertical wire (see drawing at right) effectively increase the antenna's radiation resistance and thus the RF power radiated.

The top-load capacitance increases as more wires are added, so several parallel horizontal wires are often used, connected together at the center where the vertical wire attaches. Because each wire's electric field impinges on those of adjacent wires, the additional capacitance from each added wire diminishes.

T Antenna


- Make the vertical section as high as possible
- More tophat wires increase capacitance and antenna efficiency
- Matching network required at base – usually an L network (capacitor and inductor)
- Get as many wires in the radial system as possible

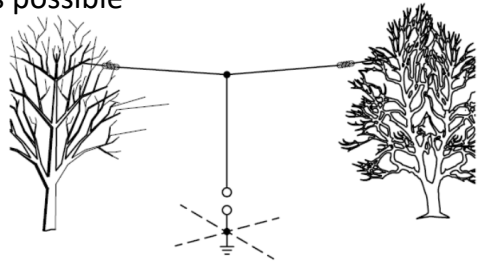

Al Penney
VO1NO

Rhombic Antenna

- Each leg acts as a long wire antenna.
- Forward lobes reinforce, sidelobes cancel.
- Resistor makes it unidirectional.
- Feedpoint is ~600 ohms.

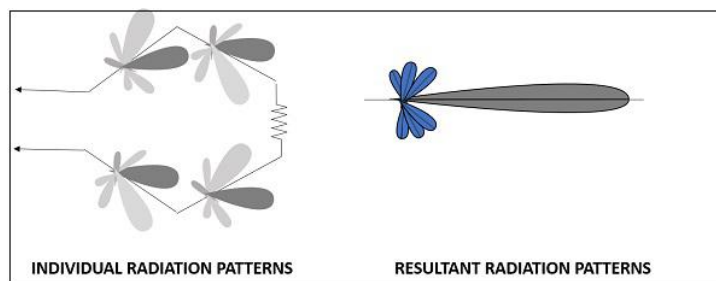

Al Penney
VO1NO

The **Rhombic Antenna** is an equilateral parallelogram shaped antenna. Generally, it has two opposite acute angles. The tilt angle, θ is approximately equal to 90° minus the angle of major lobe. Rhombic antenna works under the principle of travelling wave radiator. It is arranged in the form of a rhombus or diamond shape and suspended horizontally above the surface of the earth.

Frequency Range

The frequency range of operation of a Rhombic antenna is around **3MHz to 300MHz**. This antenna works in **HF** and **VHF** ranges.

Radiation Pattern

The radiation pattern of the rhombic antenna is shown in the following figure. The resultant pattern is the cumulative effect of the radiation at all four legs of the antenna. This pattern is **uni-directional**, while it can be made bi-directional by removing the terminating resistance.

The main disadvantage of rhombic antenna is that the portions of the radiation, which do not combine with the main lobe, result in considerable side lobes having both horizontal and vertical polarization.

Advantages

The following are the advantages of Rhombic antenna –

- Input impedance and radiation pattern are relatively constant

- Multiple rhombic antennas can be connected
- Simple and effective transmission

Disadvantages

The following are the disadvantages of Rhombic antenna –

- Wastage of power in terminating resistor
- Requirement of large space
- Reduced transmission efficiency

Applications

The following are the applications of Rhombic antenna –


- Used in HF communications
- Used in Long distance sky wave propagations
- Used in point-to-point communications

Conclusion

Rhombic and related V antennas are often described as extremely high gain antennas, but that claim seems to be a little exaggerated or inflated. A 2-wavelength per leg rhombic actually has about the same gain as a single three-element monoband Yagi antenna on the design band. Most of the rhombic's performance limitations come from the high levels of spurious lobes and the very poor efficiency, especially over normal soil. The rhombic has one of the poorest gain-per-acre rankings of any high gain HF antenna array. On the other hand a rhombic antenna does have the very distinct advantage of working over very wide frequency ranges with good SWR and gain, something a basic monoband Yagi can never do. The rhombic is also a simple antenna, requiring only four supports (three supports for the V beam, and one support for inverted V derivatives).

In a large properly designed rhombic, slightly less than half of applied RF power is lost in the termination system. That power is converted to heat. Right away this puts the rhombic at a ~3 dB disadvantage to other more efficient antennas with a similar overall pattern shape or half-power beamwidth. There are ways to use this power but generally very little appears in rhombic resources.

Rhombic Antenna

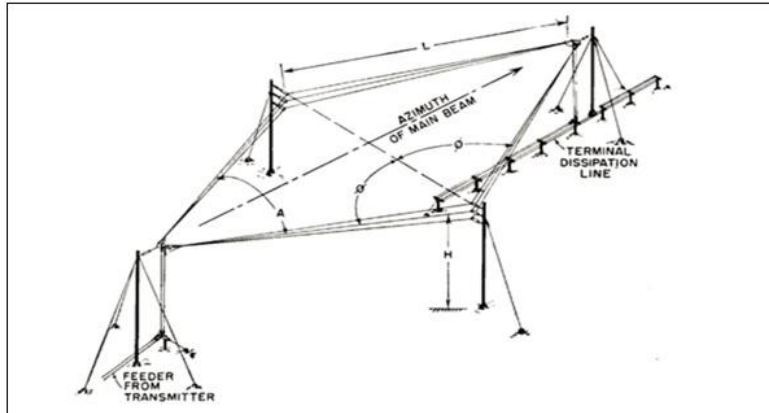


Al Penney
VO1NO

The terminating resistor must be practically a pure resistance at the operating frequencies; that is, its inductance and capacitance should be negligible. Ordinary wire-wound resistors are not suitable because they have far too much inductance and distributed capacitance. Small carbon resistors have satisfactory electrical characteristics but will not dissipate more than a few watts and so cannot be used, except when the transmitter power does not exceed 10 or 20 W or when the antenna is to be used for reception only. The special resistors designed either for use as "dummy" antennas or for terminating rhombic antennas should be used in other cases. To allow a factor of safety, the total rated power dissipation of the resistor or resistors should be equal to half the power output of the transmitter.

To reduce the effects of stray capacitance it is desirable to use several units, say three, in series even when one alone will safely dissipate the power. The two end units should be identical and each should have $1/4$ to $1/3$ the total resistance, with the center unit making up the difference. The units should be installed in a weatherproof housing at the end of the antenna to protect them and to permit mounting without mechanical strain. The

connecting leads should be short so that little extraneous inductance is introduced. Alternatively, the terminating resistance may be placed at the end of an $800\text{-}\Omega$ line connected to the end of the antenna. This will permit placing the resistors and their housing at a point convenient for adjustment rather than at the top of the pole. Resistance wire may be used for this line, so that a portion of the power will be dissipated before it reaches the resistive termination, thus permitting the use of lower-wattage lumped resistors. The line length is not critical, since it operates without standing waves.

Vertical Half-Rhombic

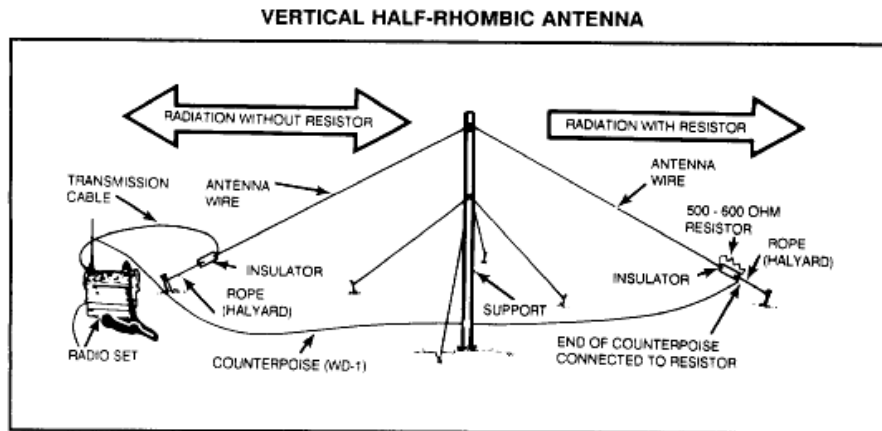

Al Penney
VO1NO

The slide shows the construction of a vertical half-rhombic antenna. This is essentially one-half of a [rhombic antenna](#) split along its major axis and then turned so that its plane is vertical. In this form, the main lobe of radiation is vertically polarized. The system is structurally simple and uses only one supporting pole.

The angle of the wires with respect to ground is a function of the length of the legs. The optimum slope angle is tabulated in Table 3.5. These angles are not the same as one-half of the acute angle of the equivalent horizontal rhombic antenna because, in the latter, the acute angle is adjusted to bring the intersection of the two cones of first maximums a few degrees above the plane of the rhombus, while in this case the angle is that which will maximize the pattern in the plane of the antenna. With this exception, we can say that the vertical pattern for the inverted-V antenna is the same as that of a free-space rhombus in the plane of the rhombus. In the same sense the horizontal-plane pattern for the inverted-V antenna is the same as that in the major axial plane normal to a free-space rhombus.

TABLE 3.5. OPTIMUM SLOPE ANGLES FOR INVERTED-V ANTENNAS

Leg Length Wavelengths	Slope Angle Degrees
2	36
3	29
4	24.5
5	22
6	20.5
7	19.5

To feed the inverted V, it is usually preferred to use a balanced feeder, similar to those which would be employed for other balanced antennas, and to make a balanced to unbalanced transformation with the proper impedance ratio to excite the antenna. (In other words, use 450 ohm ladder line and an antenna tuner).

Extended Double Zepp

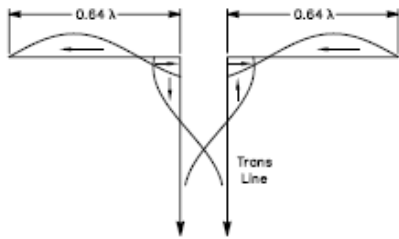


Fig 43—The extended double Zepp. This system gives somewhat more gain than two $1/2\text{-}\lambda$ collinear elements.

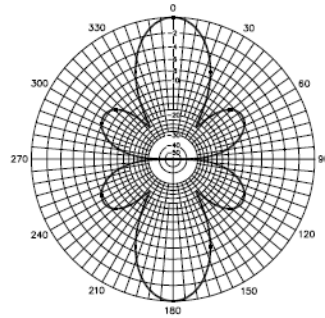


Fig 44—E-plane pattern for the extended double Zepp of Fig 43. This is also the horizontal directional pattern when the elements are horizontal. The axis of the elements lies along the 90°-270° line. The array gain is approximately 3 dBd (5.2 dBi).


Al Penney
VO1NO

THE EXTENDED DOUBLE ZEPP

An expedient that may be adopted to obtain the higher gain that goes with wider spacing in a simple system of two collinear elements is to make the elements somewhat longer than $1/2 \omega\lambda$. As shown in **Fig 43**, this increases the spacing between the two in-phase $1/2\text{-}\lambda$ sections at the ends of the wires. The section in the center carries a current of opposite phase, but if this section is short the current will be small; it represents only the outer ends of a $1/2\text{-}\omega\lambda$ antenna section. Because of the small current and short length, the radiation from the center is small. The optimum length for each element is $0.64 \omega\lambda$.

At greater lengths the system tends to act as a long-wire antenna, and the gain decreases. This system is known as the “extended double Zepp.” The gain over a $1/2\text{-}\omega\lambda$ dipole is approximately 3 dBd, as compared with approximately 1.6 dBd for two collinear $1/2\text{-}\omega\lambda$ dipoles. The directional pattern in the plane containing the axis of the antenna is shown in **Fig 44**. As in the case of all other collinear arrays, the free-space pattern in the plane at right angles to the antenna elements is the same as that of a $1/2\text{-}\omega\lambda$ antenna—circular.

Extended Double Zepp

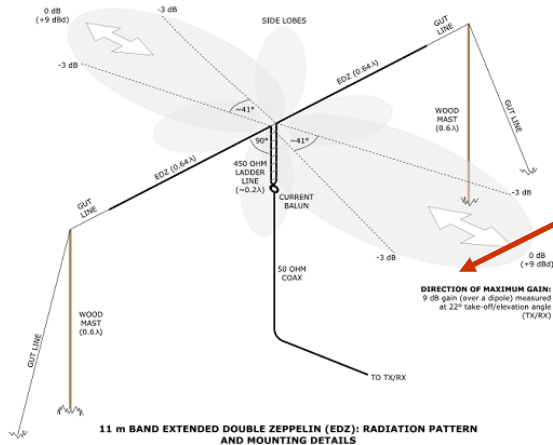

Afraid Not!
Gain over a
dipole at the
same height is
about 3 dB!

Al Penney
VO1NO

Some people quote unrealistic gain figures for the Extended Double Zepp, perhaps using antenna modeling software figures of dipoles in free space as the comparison antenna. Remember that a dipole over actual ground can have 6 dB or more gain over a dipole in free space because of reflections off the ground.

The best way to feed the EDZ is with 450 ohm ladder line – it permits it to be used on other bands, though the radiation pattern will not be the same as it is for the band it is designed for. Alternatively, the ladder line section can be (in FEET) $246/F$ (MHz) long, and connected to 50 ohm coax cable, preferably with an RF choke at the end of the coax. You will have to ‘cut-and-try’ to get the length correct, so start with the ladder line longer than calculated.

6M Extended Double Zepp, VO1NO



Al Penney
VO1NO

Some people quote unrealistic gain figures for the Extended Double Zepp, perhaps using antenna modeling software figures of dipoles in free space as the comparison antenna. Remember that a dipole over actual ground can have 6 dB or more gain over a dipole in free space because of reflections off the ground.

The best way to feed the EDZ is with 450 ohm ladder line – it permits it to be used on other bands, though the radiation pattern will not be the same as it is for the band it is designed for. Alternatively, the ladder line section can be (in FEET) $246/F$ (MHz) long, and connected to 50 ohm coax cable, preferably with an RF choke at the end of the coax. You will have to ‘cut-and-try’ to get the length correct, so start with the ladder line longer than calculated.

Sterba Curtain


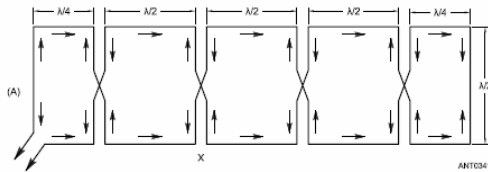


Fig 48—Typical Sterba array, an 8-element version.
Fied.

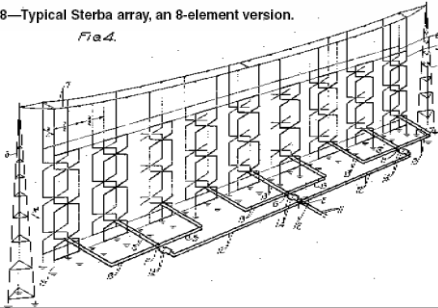

Al Penney
VO1NO

The Sterba array, shown at A in **Fig 61**, is a broadside radiator consisting of both collinear and parallel elements with $1/2\text{-}\lambda$ spacing between the latter. Its distinctive feature is the method of closing the ends of the system. For direct current and low-frequency ac, the system forms a closed loop, which is advantageous in that heating currents can be sent through the wires to melt the ice that forms in cold climates. There is comparatively little radiation from the vertical connecting wires at the ends because the currents are relatively small and are flowing in opposite directions with respect to the center (the voltage loops are marked with dots in this drawing). The system obviously can be extended as far as desired. The approximate gain is the sum of the gains of one set of collinear elements and one set of broadside elements, counting the two $1/4\text{-}\lambda$ sections at the ends as one element. The antenna shown, for example, is about equivalent to one set of four collinear elements and one set of two parallel broadside elements, so the total gain is approximately $4.3 + 4.0 = 8.3$ dBd. Horizontal polarization is the only practicable type at the lower frequencies, and the lower set of elements should be at least $1/2\text{ w}\lambda$ above ground for best results.

When fed at the point shown, the impedance is of the order of $600\ \Omega$. Alternatively, this point can be closed and the system fed between any two elements, as at X. In this case a point near the center should be chosen so the power distribution among the elements will be as uniform as possible. The impedance at any such point will be $1\ \text{k}\Omega$ or less in systems with six or more elements.



Three-bay Sterba Curtain for 6M, Whitehead Island

Al Penney
VO1NO

3 bay Sterba Curtain for 6M on Whitehead Island.



Sterba Curtain


- Three-bay Sterba Curtain for 40M.
- Whitehead Island, in the Bay of Fundy.
- Note that a reflector screen can make the array unidirectional, and give about 3 dB more gain.
- Note also that we did NOT do that here!

Al Penney
VO1NO

Shunt Fed Vertical

- Permits use of a grounded tower as a vertical antenna.
- Yagis make tower appear longer in electrical sense.
- Good option for 160 or 80 meter vertical for city lots.
- Good wire radial system is required.

Al Penney
VO1NO

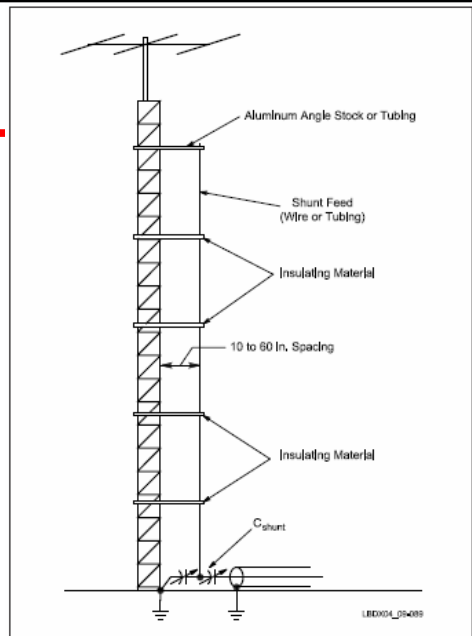

A tower can be used as a vertical antenna, provided that a good ground system is available. The shunt-fed tower is at its best on 1.8 MHz, where a full $\lambda/4$ vertical antenna is rarely possible. Almost any tower height can be used. If the beam structure provides some top loading, so much the better, but anything can be made to radiate—if it is fed properly. W5RTQ uses a self-supporting, aluminum, crank-up, tilt-over tower, with a TH6DXX tribander mounted at 70 feet. Measurements showed that the entire structure has about the same properties as a 125-foot vertical. It thus works quite well as an antenna on 1.8 and 3.5 MHz for DX work requiring low-angle radiation.

Gamma match – one capacitor

Omega Match – two capacitors



Shunt Fed Vertical

- 40-foot tower loaded for both 160 and 80M on St. Paul Island.





Al Penney
VO1NO

Shunt fed tower for 160 and 80M on St. Paul Island DX'pedition.

Feedpoint for shunt fed tower for 160 and 80M on St. Paul Island DX'pedition.
Variable capacitors are in the Rubbermaid container.

Beverage Antenna

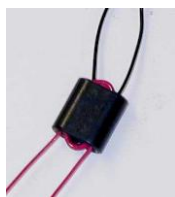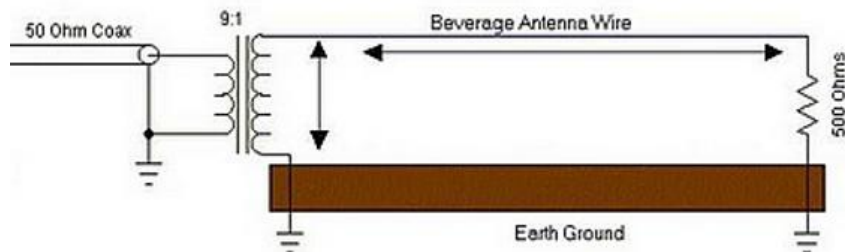

- Low noise receive antenna for 160, 80, 60 and 40 meter bands.
- Receives in direction of terminating resistor.

Al Penney
VO1NO

The **Beverage antenna** or "wave antenna" is a long-wire receiving [antenna](#) mainly used in the [low frequency](#) and [medium frequency](#) radio bands, invented by [Harold H. Beverage](#) in 1921. It is used by [amateur radio](#), [shortwave](#) listening, and [longwave radio DXers](#) and military applications.

A Beverage antenna consists of a horizontal wire from one-half to several [wavelengths](#) long (tens to hundreds of meters; yards at HF to several kilometres; miles for longwave) suspended above the ground, with the [feedline](#) to the receiver attached to one end, and the other end of the wire terminated through a resistor to [ground](#). The antenna has a unidirectional [radiation pattern](#) with the [main lobe](#) of the pattern at a shallow angle into the sky off the resistor-terminated end, making it ideal for reception of long distance [skywave](#) (skip) transmissions from stations over the horizon which reflect off the [ionosphere](#). However the antenna must be built so the wire points in the direction of the transmitter(s) to be received.

The advantages of the Beverage are excellent [directivity](#), a wider [bandwidth](#) than resonant antennas, and a strong ability to receive distant and overseas transmitters. Its disadvantages are its physical size, requiring considerable land area, and inability to rotate to change the direction of

reception. Installations often use multiple Beverage antennas to provide wide azimuth coverage.

DX'pedition Beverage Antenna



Al Penney
VO1NO

Feedpoint for the Beverage antenna pointed towards Europe from Bon Portage Island, off the southern tip of NS. It worked great! Signals that were covered in static popped out of the noise when the Beverage antenna was selected for receive. The black box contains relays that select the different antennas.

The matching transformer is mounted in a deodorant container. It is sturdy, it protects the transformer, and it's cheap! Note that one wire goes to the antenna, while the other is attached to the ground rod. The black wire is coax cable that goes to the antenna switchbox, and then back to the radio.

DX'pedition Beverage Antenna



Al Penney
VO1NO

The **Beverage antenna** or "wave antenna" is a long-wire receiving [antenna](#) mainly used in the [low frequency](#) and [medium frequency](#) radio bands, invented by [Harold H. Beverage](#) in 1921. It is used by [amateur radio](#), [shortwave](#) listening, and [longwave radio DXers](#) and military applications.

A Beverage antenna consists of a horizontal wire from one-half to several [wavelengths](#) long (tens to hundreds of meters; yards at HF to several kilometres; miles for longwave) suspended above the ground, with the [feedline](#) to the receiver attached to one end, and the other end of the wire terminated through a resistor to [ground](#). The antenna has a unidirectional [radiation pattern](#) with the [main lobe](#) of the pattern at a shallow angle into the sky off the resistor-terminated end, making it ideal for reception of long distance [skywave](#) (skip) transmissions from stations over the horizon which reflect off the [ionosphere](#). However the antenna must be built so the wire points in the direction of the transmitter(s) to be received.

The advantages of the Beverage are excellent [directivity](#), a wider [bandwidth](#) than resonant antennas, and a strong ability to receive distant and overseas transmitters. Its disadvantages are its physical size, requiring considerable land area, and inability to rotate to change the direction of

reception. Installations often use multiple Beverage antennas to provide wide azimuth coverage.



In the shack I have a control box with a knob surrounded by 8 LEDs. As the knob is rotated, a direction is selected, and the corresponding LED is illuminated. I have two coax cables running from the control box to three remote switchboxes in the field (one switchbox feeds into another), and coax running to the receive input on my rig. The switchboxes use relays to switch both the center conductor and braid of the coax to select the proper antenna i.e.: direction. Switching both conductors is important - directivity can be lost if this is not done. As a particular direction is chosen in the shack, the appropriate coax is selected, and the proper control lines energized so as to activate the required relays in the remote switchboxes. Also, 24VDC is applied to the center conductor of the coax that runs to the remote switchbox. More on that in a moment.

I use a Kenwood TS-950SD on HF. It has two RCA plugs on back – RX Ant Out and RX Ant In. Normally they are connected with a jumper, but they can also be used to connect a separate RX antenna. I run a cable from both to the control box. Using the knob in the lower right, I can connect the Beverage antennas, or several other RX antennas, including my K9AY. I can also bypass the RX antennas, feeding the RX Ant Out into the RX Ant In. This makes it easy to use other antennas when I go to higher bands.

The control box also takes a feed from the PTT line. When I transmit, a relay is keyed to ground the input from the active Beverage. It might not actually be needed, but better safe than sorry! There is also room for a pre-amp if I ever need one.

Why did I use 24VDC? I had lots of 24VDC relays and a 24 VDC power supply. It also suffers from less I^2R losses in the control lines and coax center conductor.


Questions

Al Penney
VO1NO





Dipole Construction

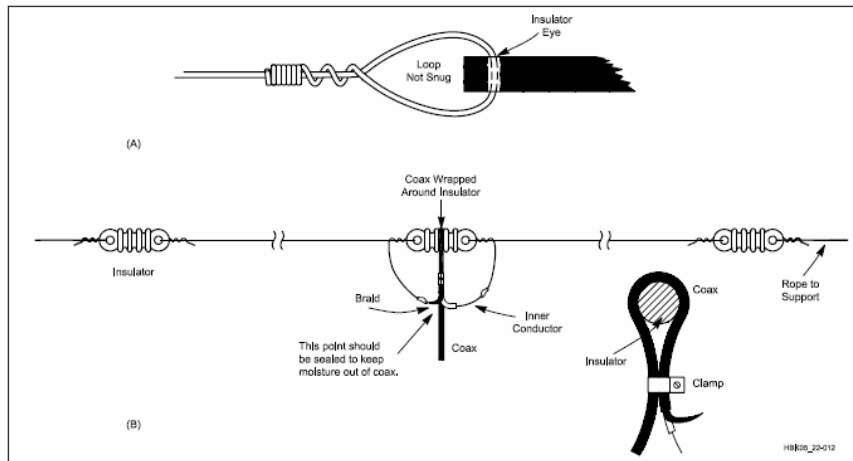

Al Penney
VO1NO

HF dipole construction practical aspects

When constructing an HF dipole for amateur radio applications, or for any application, there are a few precautions that it is wise to follow.

- Active length of antenna does not include wire looped back for securing:** When mechanically securing the antenna wire to an insulator or other end point, the best way is often to take the wire through the insulator and wrap and then solder the wire around itself.

- When measuring the electrical or active length for the antenna, the section that is looped back is not included in the electrical length, and therefore the wire must be cut longer to accommodate this amount. This is in addition to the extra required so that the antenna can be pruned to the right length.


- As high as possible:** As with any antenna, it is best to install the HF ham band antenna so that it is as high as possible. This will help ensure that it can provide the best performance. It is surprising the improvement that raising an antenna gives - as it starts to clear the surrounding objects that ask the signal, it will receive and radiate far better.

- Keep clear of other objects:** As far as possible the HF ham band dipole antenna should be kept away from objects that could mask the signals

being received and transmitted. In a domestic environment, this is not always possible, but a little planning and forethought can make the best of any installation.

•**Seal coax:** If coaxial cable is to be used, it is essential that the top end is sealed. If not moisture can enter the cable and the loss will increase considerably. Coaxial cable is not cheap, and even a small amount of water ingress can degrade its performance. Even when the cable has dried out, the fact that water has been in there will cause oxidation of the braid screen, etc. and this will increase the loss quite considerably.

Center Insulator Options

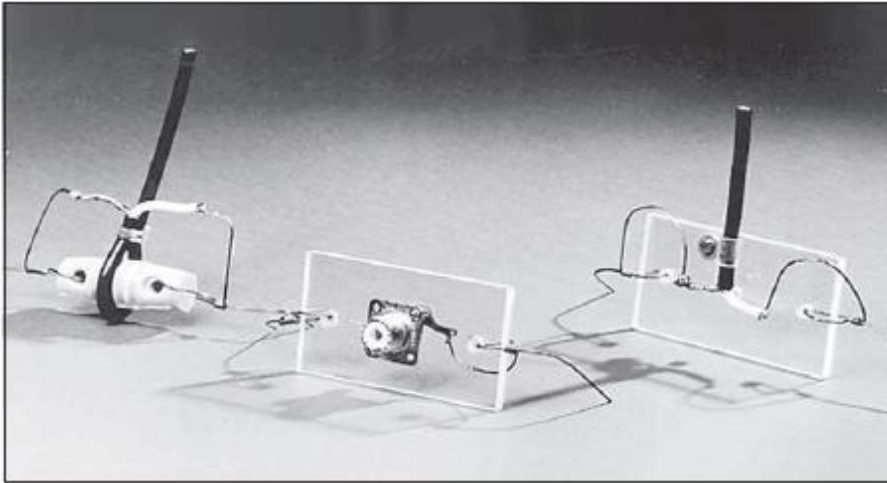

Al Penney
VO1NO




Al Penney
VO1NO

Commercial Center Insulators




Al Penney
VO1NO

PVC Center Insulator

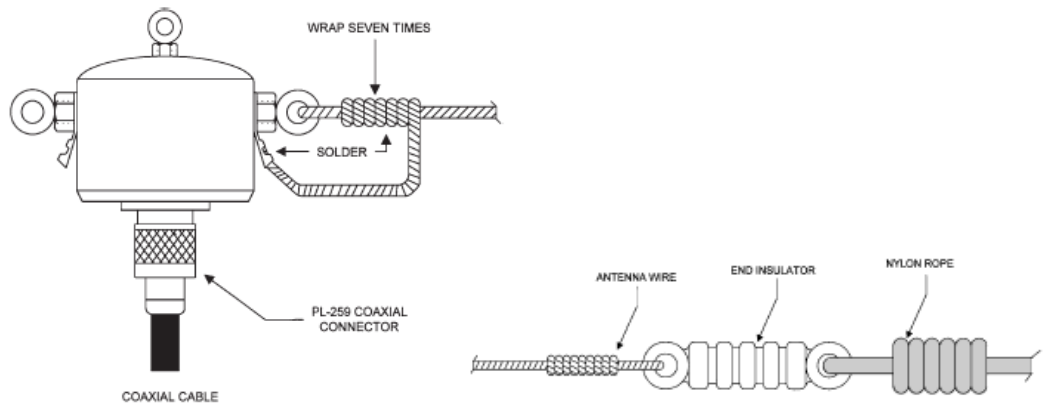

Al Penney
VO1NO

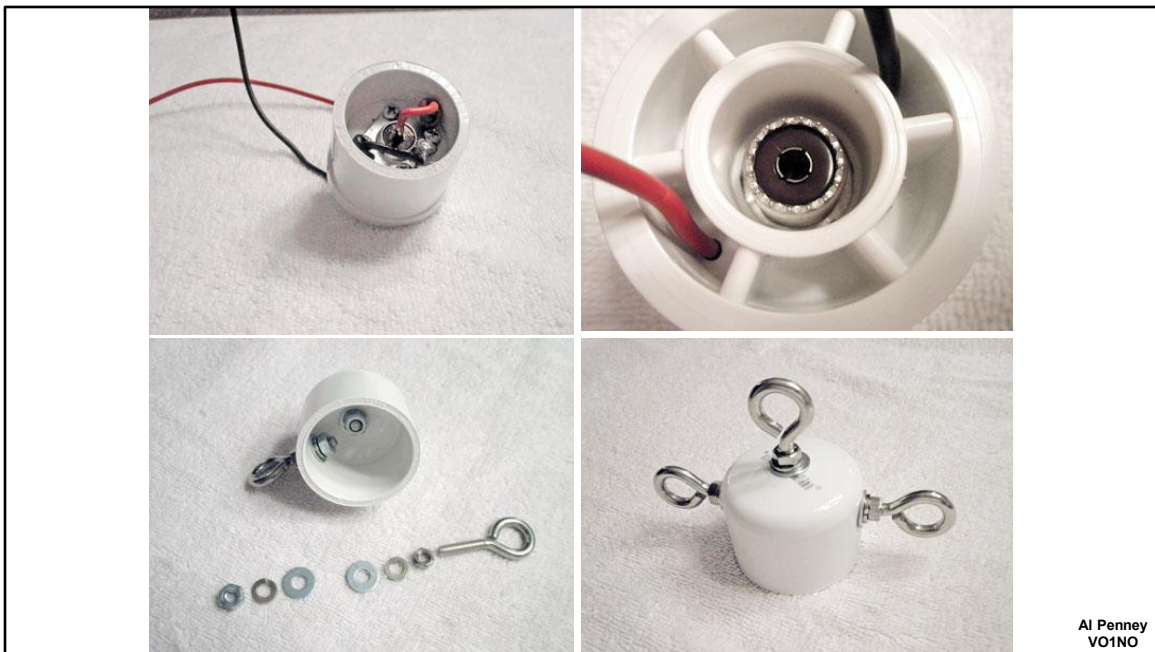

Al Penney
VO1NO

http://www.k4icy.com/dipoleconnector_cylinder.html

This is yet another alternative homebrew center connector for a wire dipole HF antenna. Yes, commercially available versions are cheap and easy, and you can make one out of a scrap piece of Plexiglass (R) but why not make a **weather-proof** one out of your scrap junk or cheap material from the home improvement store. This one will fit my requirements for a simple 40m wire dipole or inverted-V and will be compact, waterproof, fairly durable, plus has room for a current BALUN. - **This will only cost about \$12 in materials!**

Parts to be used:


- 1 - PVC End Cap, 1-1/2"
- 1 - PVC Reducer, 1-1/2" Pipe Diameter external body to 1/2" adapter
- 1 - SO-239 UHF Flange Mount Female Socket. Four mount holes in square flange.
- 1 - Screws, Pan Head Sheet Metal, #6 x 1/2" (or down to 1/4") Stainless if possible.
- 3 - Eye Bolts, Closed Loop, Bolt End 3/16" x 2" plus nylon lock washers or bolts, bolts, x 2 disc washers, lock washers. Course or Fine threaded,

Stainless where available.

10-14 gauge wire for connections.

PVC pipe cleaning fluid and cement.

Silicone long life weather proofing sealant.

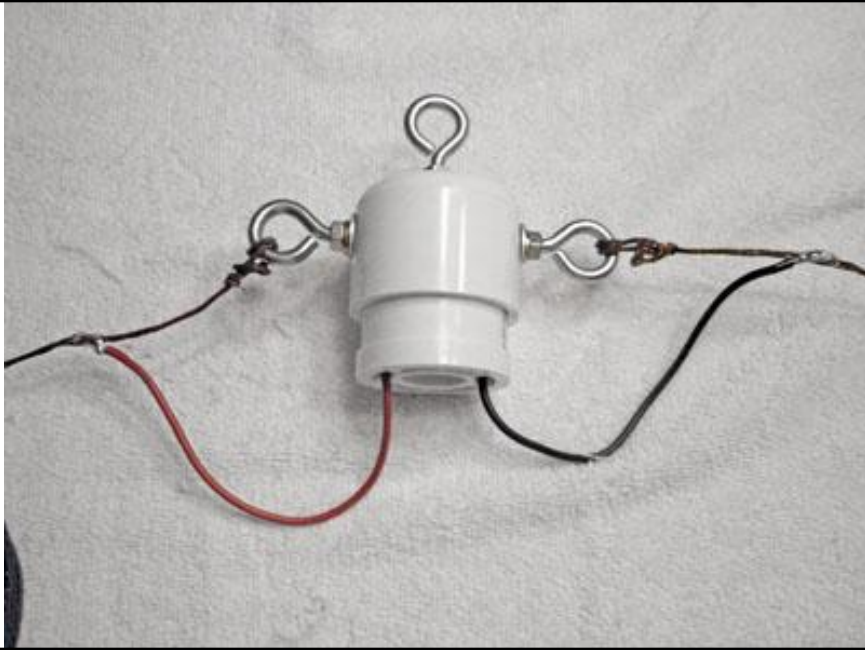


Al Penney
VO1NO



Purchased

Homebrew

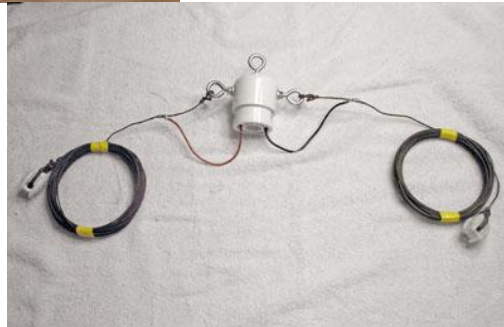

Al Penney
VO1NO

Splicing Wire


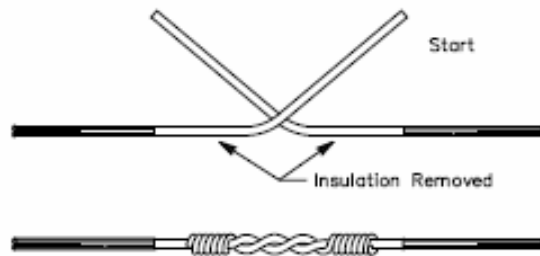


Fig 3—Correct method of splicing antenna wire. Solder should be flowed into the wraps after the connection is completed. After cooling, the joint should be sprayed with acrylic to prevent oxidation and corrosion.

Al Penney
VO1NO

End Supports

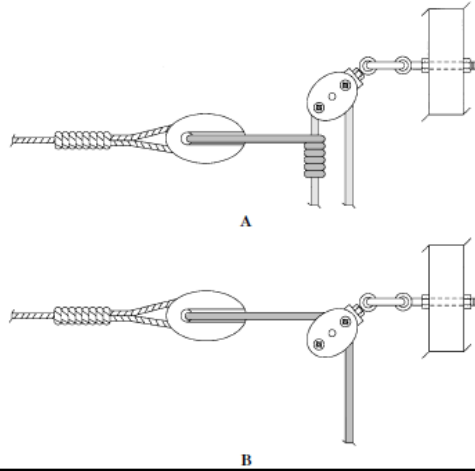

Al Penney
VO1NO

End Supports

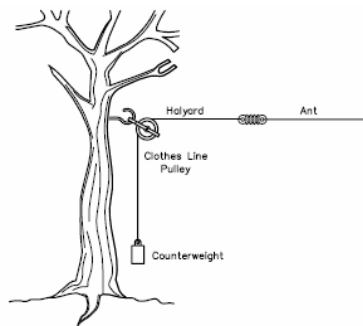


Fig 1—A method of counter weighting to minimize antenna movement and avoid its breaking from tree movement in the wind. The antenna may be lowered without climbing the tree by removing the counterweight and tying additional rope at the bottom end of the halyard. Excess rope may be left at the counterweight for this purpose, as the knot at the lower end of the halyard will not pass through the pulley.

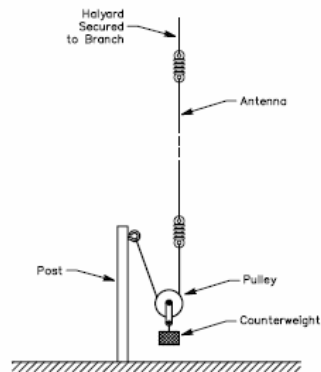


Fig 5—Counterweight for a vertical antenna suspended from an overhanging tree branch.

Al Penney
VO1NO

Passing a Line Thru Trees

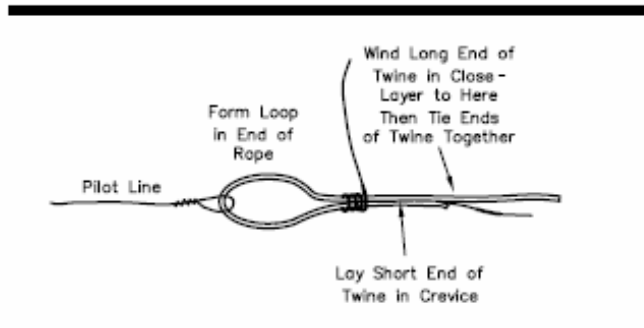


Fig 2—In connecting the halyard to the pilot line, a large knot that might snag in the crotch of a tree should be avoided, as shown.

Al Penney
VO1NO

Homebrew Mast

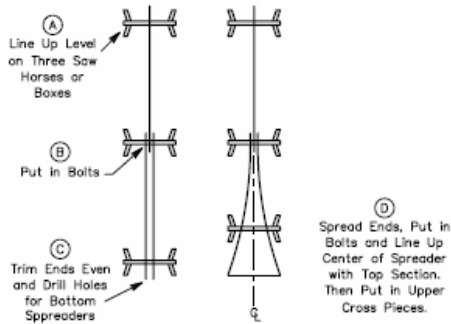


Fig 8—Method of assembling the A-frame mast on sawhorses.

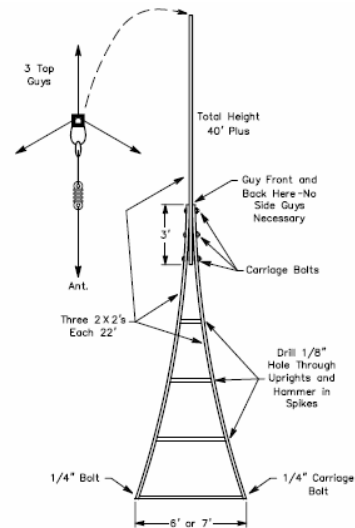


Fig 7—The A-frame mast is lightweight and easily constructed and erected.

Al Penney
VO1NO

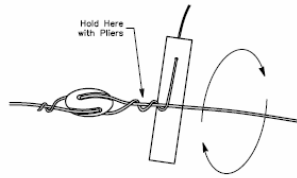


Fig 9—Simple lever for twisting solid guy wires when attaching strain insulators.

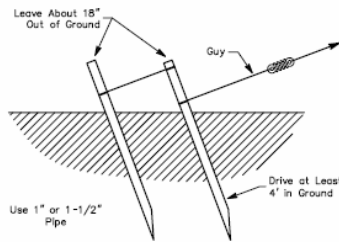


Fig 11—Driven guy anchors. One pipe is usually sufficient for a small mast. For added strength, a second pipe may be added, as shown.



Fig 10—Stranded guy wire should be attached to strain insulators by means of standard cable clamps made to fit the size of wire used.

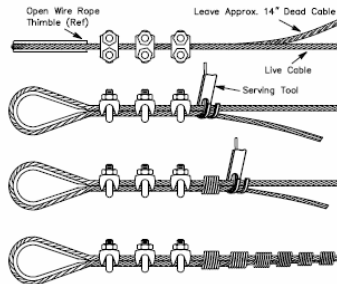


Fig 25—Traditional method for securing the end of a guy wire.

Al Penney
VO1NO

Gin Pole

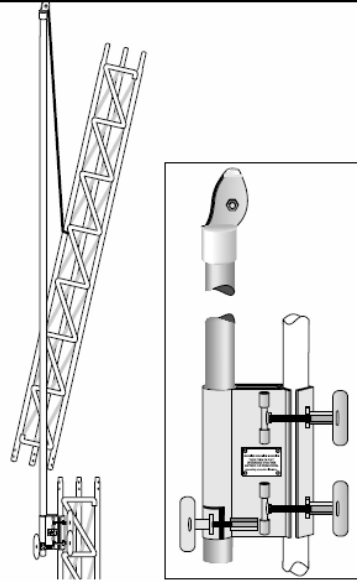


Fig 21—Drawing of Rohn "Erection Fixture" EF2545, also known commonly as a "gin pole."

Al Penney
VO1NO



Al Penney
VO1NO


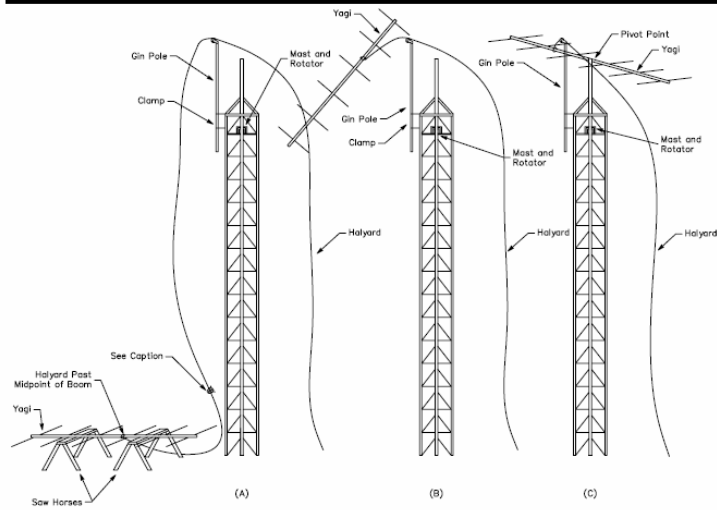


Fig 33—Raising a Yagi antenna alongside the tower. At A the Yagi is placed in a clear area, with the boom pointing toward the tower. The halyard is passed under the elements, then is secured to the boom beyond the midpoint. B shows the antenna approaching the top of the mast. The person on the tower guides it after the lifting rope has been untied from the front of the antenna. At C the antenna is pulled into a horizontal position by the ground crew. The tower worker inserts the pivot bolt and secures it. Note: A short piece of rope is tied around the halyard and the boom at the front of the antenna to stabilize the beam as it is being raised. The tower worker removes it when the boom reaches him at the top of the tower.


Al Penney
VO1NO

Snatch Block



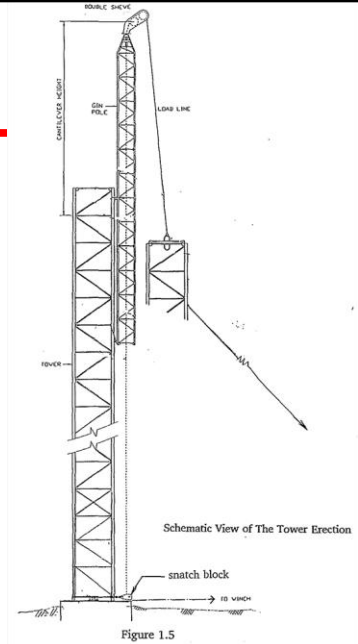


or
“How to Macgyver an Antenna”!

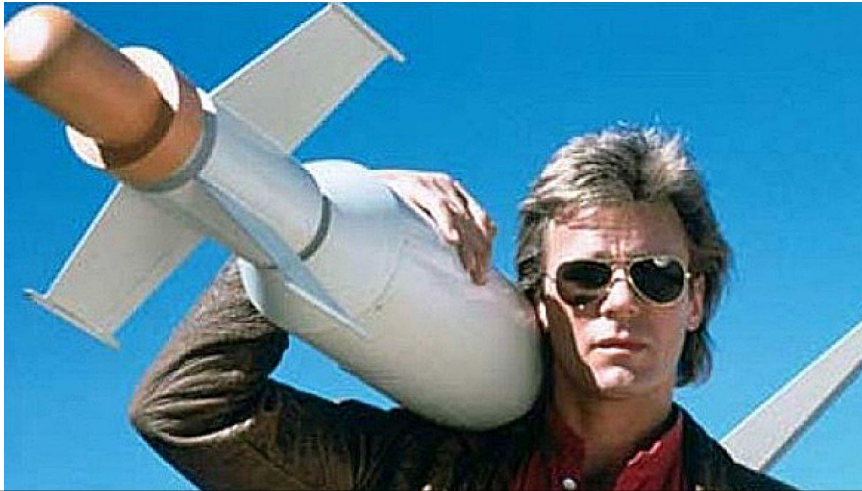

Al Penney
VO1NO

2M $\frac{1}{4} \lambda$ Vertical

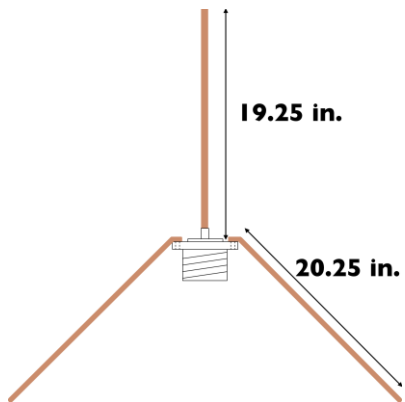

Al Penney
VO1NO

VHF/UHF Vertical with BNC



Al Penney
VO1NO

Use Coax as a Support



Al Penney
VO1NO

Above: I needed a quickie quarter-wave ground plane antenna cut for the UHF bands but made with available parts laying around. An SO-239 chassis connector with coat hanger radiating element and ground radials soldered as shown. The RG-8/U 50 ohm coax connects to it via an PL-259 connector, a vent pipe and some tape makes it happen. I can receive UHF SATCOM signals with this, especially the ones lower on my horizon. Gain is good if you can get it, simple can work. Nothing original here.

For small **quarter wave** VHF/UHF ground plane antennas, working in centimeters is convenient:

$$L=7120/F$$

Vertical element approximate Length (in centimeters) = $7120/F(\text{mc})$.

(Or $L=2808/F$ when working in inches)

Make the radials about 5% longer, sloping downward about 45 degrees makes the feedpoint pretty close to 50 ohms.

Coat hanger wire works well in a pinch, it it usually lacquer or paint coated so it will not rust in the near-term. Another good material is TIG welding rod.

“Harbor Freight” sells 3/32” TIG rods, type ER4043. About \$1.00 each, they fit inside the female contact of an SO-239 coax connector. They work well. Below are some 1/8” TIG rods for a bigger connector diameter installation.

Wire Ground Plane Antenna


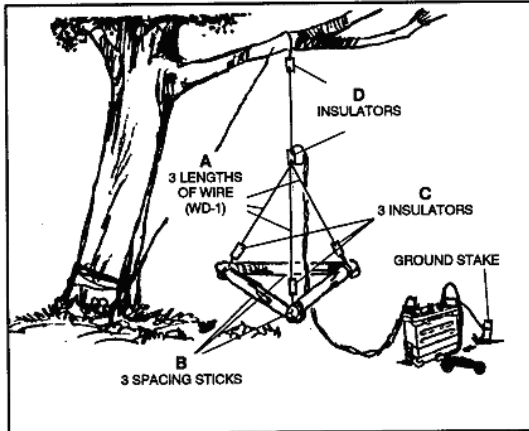


Figure 7-13. Expedient 292-type antenna.




Al Penney
VO1NO

Wire Ground Plane Antenna

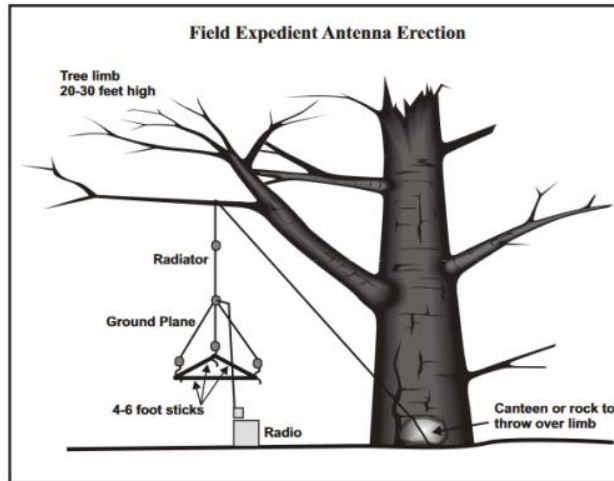


Al Penney
VO1NO

Field Expedient Cubical Quad

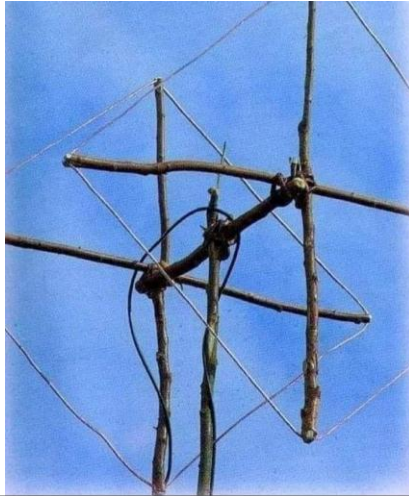

Al Penney
VO1NO


Square Lashing

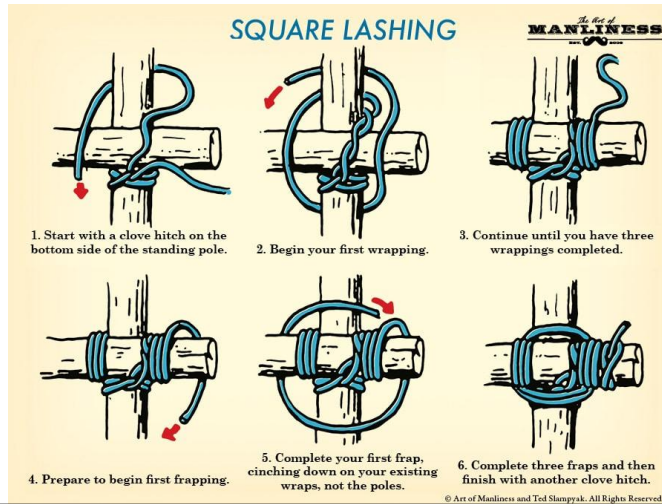

Al Penney
VO1NO


Sleeve Dipole

- Strip $1/4 \lambda$ outer insulation off end of coax. Do not cut braid!
- Loosen braid and fold back over coax.
- Consider an RF choke in coax immediately below the braid sleeve.

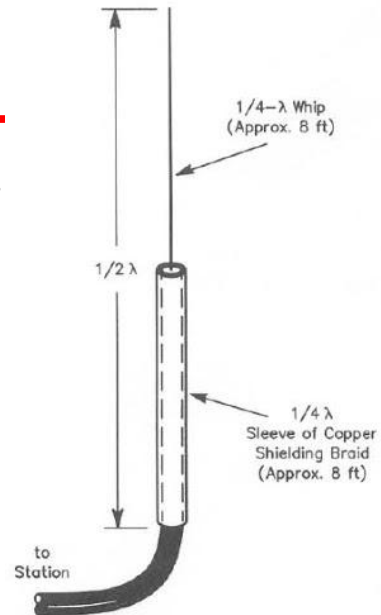

Al Penney
VO1NO

Even Easier Vertical Dipole!

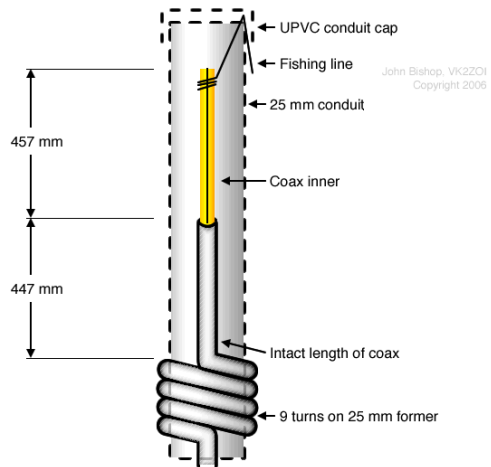

Al Penney
VO1NO

General Purpose Center Insulator



Al Penney
VO1NO

Here's another dipole center insulator built with scrap plastic and connectors: Connect the coax connector center pin to one screw terminal, the other goes to the chassis connector "ground". Cheap, simple, lightweight, obvious.

Another Center Insulator




Al Penney
VO1NO

Above: Another off-the-shelf expedient, a Pomona 1296 shown here, or the preferred Pomona 1452 (female) BNC/Banana terminal adapter. The female Pomona 1452 (NSN 6625-00-102-5652) is preferred for a dipole fed by RG-58/U coax with an existing BNC male connector already attached. Otherwise you will need a "BNC double barrel" adapter as shown above.


This can work well and is simple and small. However the coaxial cable can pull out of the BNC cable connector if the feedline is too long/heavy. The feedline may need some strain relief at the connector for long runs back to the radio.

Zip Tie Center Insulator

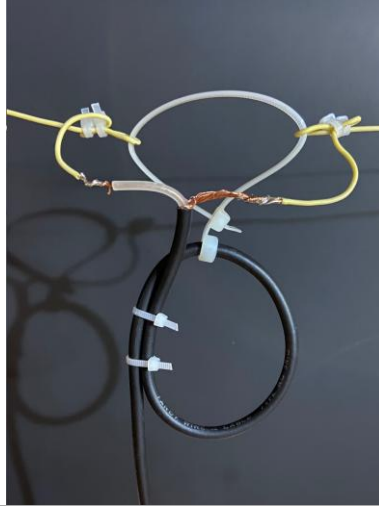

Al Penney
VO1NO

Zip Tie Center Insulator

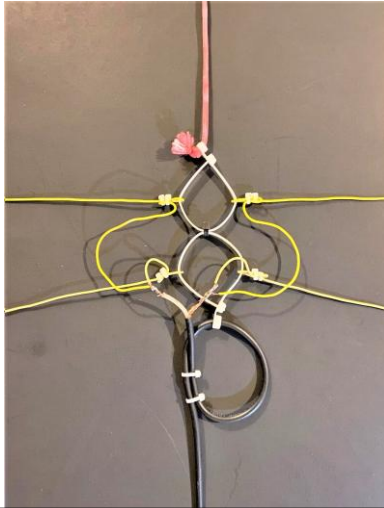

Al Penney
VO1NO

Multi-band dipole

Antenna Wire



Al Penney
VO1NO

In an emergency, any wire of sufficient length can be used for an antenna; for example, barbed wire, electrical wire, fence wire, and metal-cored clothesline. Communication has been successful using metal house gutters and even metal bed springs. A radio operator's mission is not completed until communication is established.

Zip Cord Dipole



Above: On the go? Only have some WD-1A/TT infantry field commo wire, speaker wire or Zip cord for your dipole? What could be simpler? Just unzip the leg lengths you want, tie an overhand knot to keep the feed line portion from further unzipping, hang it up.

No center insulator available or needed for low power operation? The wire insulation itself does the job.

Assuming the feed point looks like, say, 72 ohms and you are feeding it from a 20 watt transmitter, the voltage here between the legs = 38 volts RMS. No problem for this insulation. At 100 watts it is only 85 volts, again no problem. WD-1A/TT wire insulation is rated at 1000 volts RMS (MIL-DTL-49104C) per conductor, so you are not going to arc it over when operating the antenna at its resonant frequency. You can also use lamp "zip cord", speaker wire, demo wire etc.

Or rig it vertically for VHF ops with other vertically polarized VHF stations in your Net. In either case, run the feed line away from the antenna at 90 degrees for at least a quarter wave if you can (for a more "textbook" omnidirectional radiation pattern).

Field Expedient Insulators

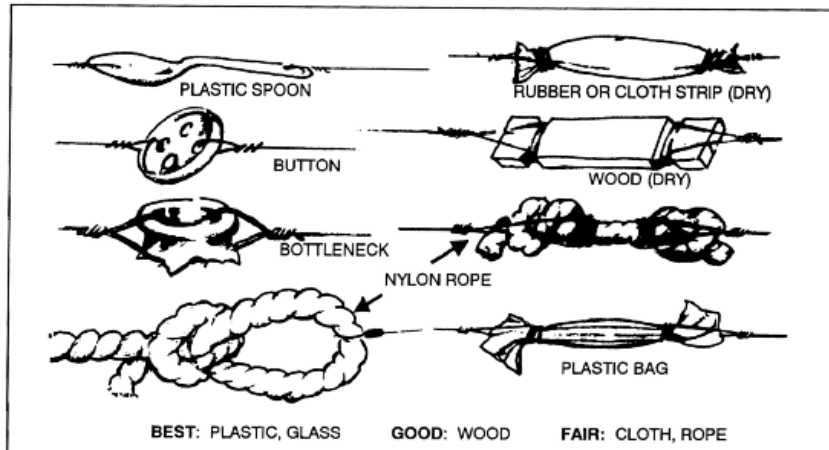


Figure D-15. Expedient insulators.

Al Penney
VO1NO

Field Expedient Insulators




Al Penney
VO1NO

Dipole or other wire-end expedient insulators? Because the highest voltages on a wire antenna are at the far end(s). Insulators? You've read the manual; Below:

For HF wire antennas, plastic spoons from C-Rats or MRE's can work if they are all you have. They are not very strong but they illustrate the concept of field-expediency. Better to just cut the "handle" off and use only that part, see below. Best to melt the holes, say with a hot nail rather than trying to puncture them with a knife, the thin plastic splits easily. You get the idea, this is all common-sense stuff.

As a practical matter, end insulators like these are really not even needed for a low powered HF field set. A 20 watt transmitter will not arc over at the antenna end or de-tune even if you are just using dry 550 cord holding up bare antenna wire. Or even just the insulation of field commo wire or similar. You don't really need much insulation for the antenna to work at low power levels from say a PRC-104, 150 or even a PRC-47. It's just good engineering practice and appropriate to highlight in a Field Manual used for training.

Multi-Band Dipoles

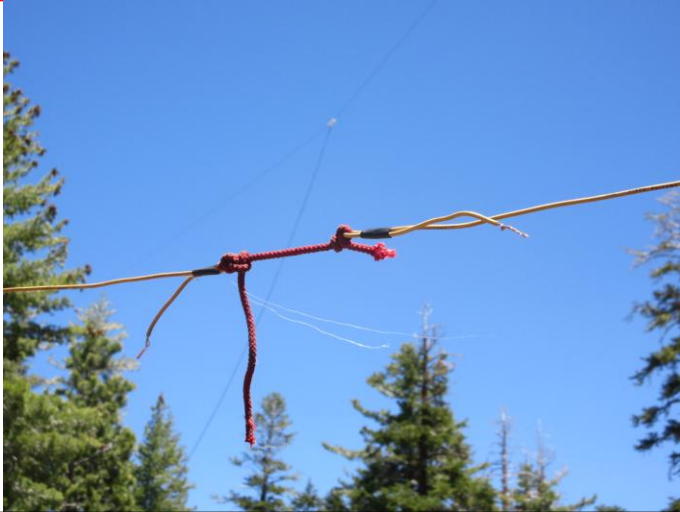

Al Penney
VO1NO

Another field expedient below: We were operating an 80 meter dipole in the boonies but needed to make comms on 60 meters. No problem. Cut the dipole legs for the 60 meter (or other higher) freq and reattach the remaining wire via an expedient insulator to isolate the remaining length. One for each of the 2 dipole legs. You can “re-jump” these insulators by twisting the wires together to go back to 80 meters.

Another Insulator!



Al Penney
VO1NO

A good field expedient antenna must first start with a good antenna design. Or at least you should be willing to accept (**and understand the reasons for**) potentially marginal performance. The expedient part is based upon availability of materials but you have to start with a good design.

The standard DIY reference for military and civilian antennas is the [ARRL Antenna Book](#) (Reference 45). Full of tried and proven antennas for a range of frequencies of interest from LF, HF, VHF, UHF and beyond. The designs are based upon solid engineering but backed up by solid measurements and practical, proven performance in a real environment.

The US Marine Corps Antenna Handbook is also excellent and practical. (Reference 88)

Start there if you are new to this stuff! Read them a few hundred times. Learn, Practice, Evaluate, Experiment, Communicate!

Run what you brung. Improvise, adapt, overcome.

Another Use For Water Bottles



Al Penney
VO1NO

Speaking of water bottles, see that innocuous water bottle up on the roof? Look closely at the center ridge tile – see the wire? I used the plastic bottle (with a little water in it) to sling and insulate one end of a dipole antenna up on the roof of the NCO Club at Camp San Luis Obispo, CA. On 7050 KC I used it to work station K6KPH over 200 miles north of here with a GRC-109 running 10 watts on this end. No one the wiser. The ubiquitous plastic water bottle makes a handy antenna insulator or lanyard heaving weight with the addition of a little sand or water.

Vertical Antenna

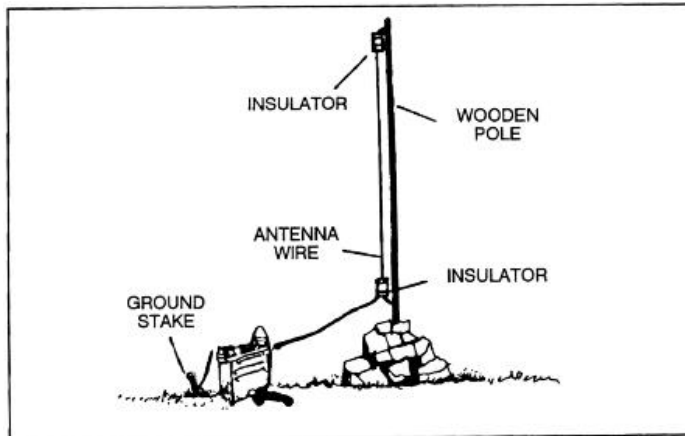


Figure D-14. Using field wire as an emergency whip.

Al Penney
VO1NO

Broken Whip?


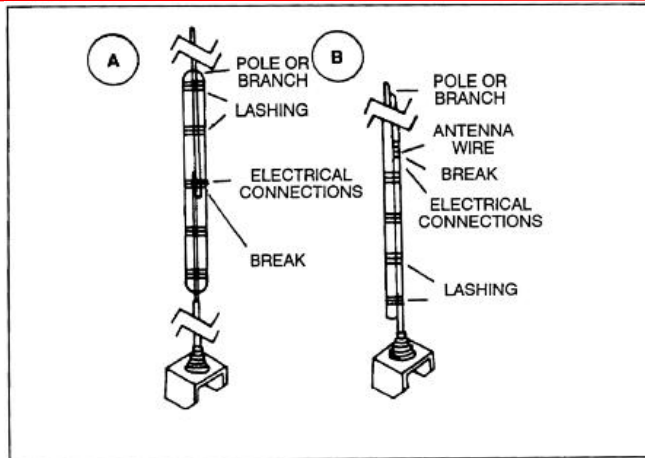


Figure D-13. Using broken sections for emergency repair.

Al Penney
VO1NO

VHF Vertical Half Rhombic

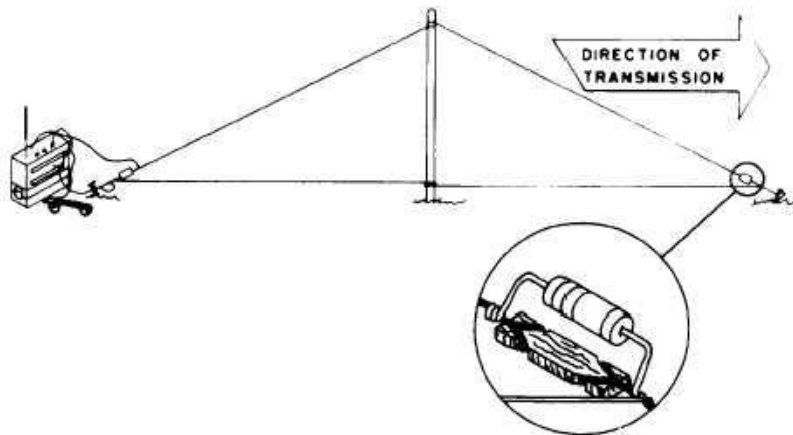

Al Penney
VO1NO

To build a unidirectional vertical half-rhombic antenna, terminate the far end with a resistance to ground. See below. (Without the resistor the antenna is bidirectional.)

The termination resistor value should nominally be around 600 ohms connected from the far end of the single wire, to ground. Connect the "ground end" of the resistor to either a ground stake, a counterpoise wire as shown, or both. ARRL Antenna Book (Reference 45), Field Radio Techniques, FM24-18. (Reference 87), USMC Antenna Handbook, (Reference 88).

Field Expedient Resistor



Al Penney
VO1NO

Don't have a 600* ohm non-inductive resistor? Just the basic stuff you might have at a field site? Improvise, adapt, overcome.

Here's how you can make a termination resistor with these "field expedient" parts:

A 500mL bottle of water, a pinch of salt from your MRE, 2 feet of WD-1A/TT field phone wire and a ground stake (screw terminal optional). The salted water is conductive and dissipates RF power as a resistor.

Split the conductors apart, strip off about 6 inches of insulation from each wire, immerse them in the salted water. Keep the bare wires as far apart as you can; don't let them touch each other.

Field Expedient Resistor



Al Penney
VO1NO

Connect one resistor wire to the far end of the antenna wire, the other resistor wire to the ground stake. This makes it electrically in parallel with the insulator.

The de-painted aluminum stake anchors the antenna end/insulator (MRE spoon in this example) via a short cord and the stake also serves as the ground point. Pour the remainder of the salt (or more if you have some) in a little hole, fill with water, keep it wet, done.

For a more efficient or more permanent system you could connect a few ground radials to the stake and/or run a ground wire from the stake, under the antenna, back to the transmitter chassis ground terminal per the above sketch. As installed at the end of a vertical half-rhombic, (or as it might be at each leg of a VEE beam array.)

The termination resistor should be able to dissipate about one-half of the transmitter rated output power. (The other half is radiated.) This water bottle resistor should easily handle a 10-20 watt CW set or a 100 watt low duty-cycle SSB transmitter. Ideal for a vertical half-rhombic used with a tactical VHF FM radio.

For those with an Engineering inclination, take advantage of the very high Specific

Heat of water. Dissipating 12 watts of continuous RF power will raise the temperature of 500 mL of water from 20 degrees C to 40 degrees C (68 to 104 degrees F) in 1 hour. (Assumes insulated bottle, it's not). Scale accordingly. You're good-to-go.

Of course the above example is not well engineered or tested on a network analyzer or an instrumented antenna test range. (However, end-terminated vertical half-rhombic antennas are well engineered, tested and proven.) *This is a field expedient.*

Second-order effects? Yes. Geometry is somewhat random, the DC resistance (VOM) will be different than the AC/RF resistance, there will be some reactance, the end-impedance of a practical wire antenna is probably not 600 ohms, the wires will eventually corrode, bottled water has random minerals in it, water will slowly evaporate etc.

But with very basic items you may have available in the field, it will work. It will get you some forward gain and some rejection of back-azimuth signals. (Like jamming, enemy SIGINT, co-channel interference deconfliction etc.). You get the idea.

Field Expedient Resistor



Al Penney
VO1NO

In this example, it took just a half-pinch of salt in 500 mL of water, “shaken, not stirred” to get near 600 ohms. If you have one, you can test the resistance with a VOM, that’s somewhat legit. Season to taste. It does not have to be very precise. (Add a little more salt if you need it to be 300 ohms.) Close enough for a ship this size.


No Coax? No Problem!



Al Penney
VO1NO


Above: You brought your complete field antenna kit but you just arrived at these coord's – and your comm window starts in 8 minutes. No time to rig a coax-fed dipole. So rig a Hasty Dipole; just the two dipole legs connected directly to the radio Antenna and Ground terminals, no transmission line. With resonant quarter wave length wires off into the trees, it tunes to full power with this 10 watt TRC-77 at a lakeside surveillance site. Here after working a mobile outside Glacier National Park in Montana on CW, 450 + miles away on 7050 kc, mid-day. It works great. Quick and easy.

Continuity Checker

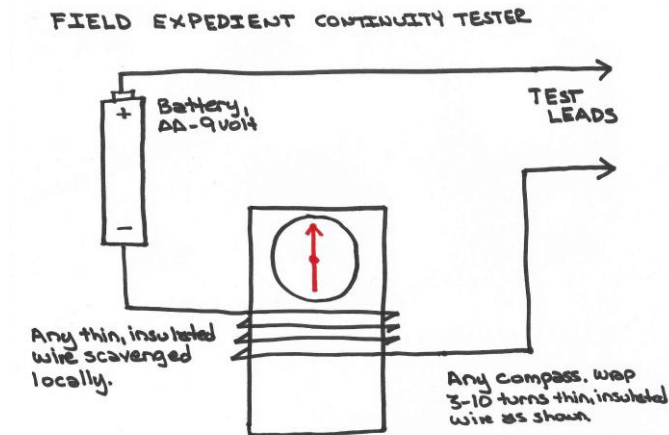

Al Penney
VO1NO


Continuity Checker

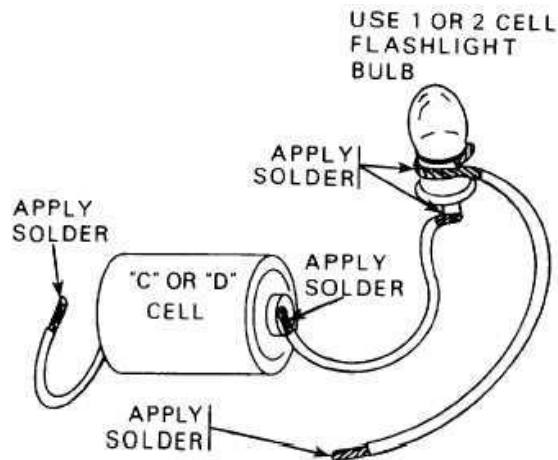

Al Penney
VO1NO

A continuity checker can be made from a flashlight bulb, flashlight battery, and three pieces of wire. When the free ends of the wires are touched to a circuit where [continuity](#) (or a short) exists, the bulb will glow. If a two-cell flashlight bulb is used with only one battery, the bulb will glow with one-half its normal brilliance.


Improved Mobile Whip

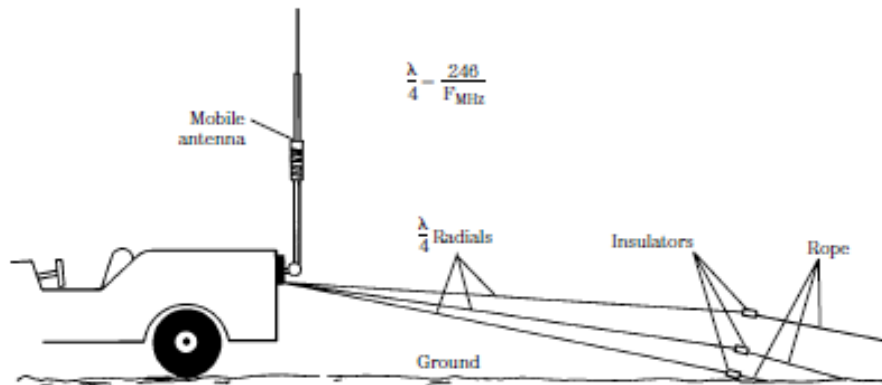

25-5B Multiple radials are even better.

Al Penney
VO1NO

Towing Hitch

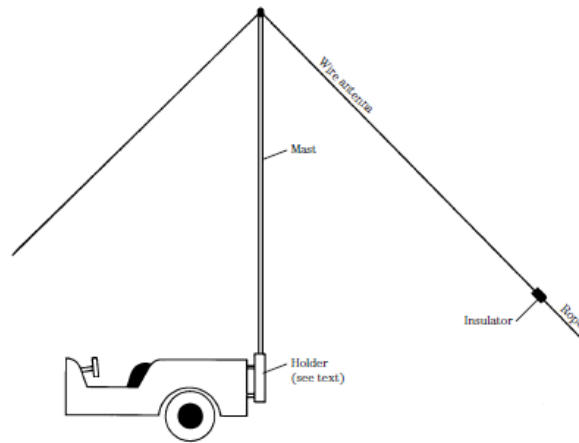

25-7 Portable inverted-vee antenna.

Al Penney
VO1NO



Review Question 1

An end-fed half-wave antenna (EFHW) has a very high feed point impedance. What device could be used to provide a good match to 50-ohm coaxial cable?

- A A transformer
- B A quarter-wave stub
- C A counterpoise
- D A good ground on the coax shield

Al Penney
VO1NO

A

Review Question 1

An end-fed half-wave antenna (EFHW) has a very high feed point impedance. What device could be used to provide a good match to 50-ohm coaxial cable?

- A A transformer
 - B A quarter-wave stub
 - C A counterpoise
 - D A good ground on the coax shield
-
- A A transformer

Al Penney
VO1NO

A

Review Question 2

How can the directivity of a half-wave dipole be increased?

- A By using a radiating element with a larger diameter
- B By adding traps to the radiating element
- C By lengthening the radiating element
- D By adding one or more parasitic elements

Al Penney
VO1NO

D

Review Question 2

How can the directivity of a half-wave dipole be increased?

- A By using a radiating element with a larger diameter
 - B By adding traps to the radiating element
 - C By lengthening the radiating element
 - D By adding one or more parasitic elements
-
- D By adding one or more parasitic elements

Al Penney
VO1NO

D

Review Question 3

What does near vertical incidence skywave (NVIS) propagation enable?

- A Medium range HF communications, especially in difficult terrain
- B Multi-hop HF worldwide communications
- C Regional communications above the critical frequency
- D Continent-wide communications

Al Penney
VO1NO

A

Review Question 3

What does near vertical incidence skywave (NVIS) propagation enable?

- A Medium range HF communications, especially in difficult terrain
 - B Multi-hop HF worldwide communications
 - C Regional communications above the critical frequency
 - D Continent-wide communications
-
- A Medium range HF communications, especially in difficult terrain

Al Penney
VO1NO

A

Review Question 4

Some antennas are constructed with traps. What is a trap?

- A A coil and capacitor in parallel
- B A large wire-wound resistor
- C A coil wrapped around a ferrite rod
- D A hollow metal can

Al Penney
VO1NO

A

Review Question 4

Some antennas are constructed with traps. What is a trap?

- A A coil and capacitor in parallel
 - B A large wire-wound resistor
 - C A coil wrapped around a ferrite rod
 - D A hollow metal can
-
- A A coil and capacitor in parallel

Al Penney
VO1NO

A

Review Question 5

How is a parasitic antenna element energized?

- A By direct connection to a driven element
- B By direct connection to the transmission line
- C By inductive coupling from a wave trap
- D By induction or radiation from a driven element

Al Penney
VO1NO

D

Review Question 5

How is a parasitic antenna element energized?

- A By direct connection to a driven element
 - B By direct connection to the transmission line
 - C By inductive coupling from a wave trap
 - D By induction or radiation from a driven element
-
- D By induction or radiation from a driven element

Al Penney
VO1NO

D

Review Question 6

Why is a five-eighths wavelength vertical antenna better than a quarter-wavelength vertical antenna for VHF or UHF mobile operations?

- A Because it does not require impedance matching
- B Because it can handle more power
- C Because it has more gain
- D Because it has a high radiation angle

Al Penney
VO1NO

C

Review Question 6

Why is a five-eighths wavelength vertical antenna better than a quarter-wavelength vertical antenna for VHF or UHF mobile operations?

- A Because it does not require impedance matching
 - B Because it can handle more power
 - C Because it has more gain
 - D Because it has a high radiation angle
-
- C Because it has more gain

Al Penney
VO1NO

C

Review Question 7

How can the directivity of a half-wave dipole be increased?

- A By using a radiating element with a larger diameter
- B By adding traps to the radiating element
- C By lengthening the radiating element
- D By adding one or more parasitic elements

Al Penney
VO1NO

D

Review Question 7

How can the directivity of a half-wave dipole be increased?

- A By using a radiating element with a larger diameter
 - B By adding traps to the radiating element
 - C By lengthening the radiating element
 - D By adding one or more parasitic elements
-
- D By adding one or more parasitic elements

Al Penney
VO1NO

D

Review Question 8

If a quarter-wavelength vertical antenna is placed on the roof of a car, in what direction does it send out radio energy?

- A It goes out equally well in all horizontal directions
- B Most of it goes vertically straight-up
- C Most of it goes equally in two opposite directions
- D Most of it goes in one direction

Al Penney
VO1NO

A

Review Question 8

If a quarter-wavelength vertical antenna is placed on the roof of a car, in what direction does it send out radio energy?

- A It goes out equally well in all horizontal directions
 - B Most of it goes vertically straight-up
 - C Most of it goes equally in two opposite directions
 - D Most of it goes in one direction
-
- A It goes out equally well in all horizontal directions

Al Penney
VO1NO

A

Review Question 9

If a half-wave dipole is converted to a Yagi by adding a slightly shorter parasitic element, in what direction(s) does the radiation strength increase?

- A In both directions parallel to the elements
- B From the dipole towards the new element
- C From the new element towards the dipole
- D In both directions at right angles to the elements

Al Penney
VO1NO

B

Review Question 9

If a half-wave dipole is converted to a Yagi by adding a slightly shorter parasitic element, in what direction(s) does the radiation strength increase?

- A In both directions parallel to the elements
 - B From the dipole towards the new element
 - C From the new element towards the dipole
 - D In both directions at right angles to the elements
-
- B From the dipole towards the new element

Al Penney
VO1NO

B

Review Question 10

What is an advantage of downward sloping radials on a ground plane antenna?

- A It brings the feed point impedance closer to 300 ohms
- B It lowers the radiation angle
- C It brings the feed point impedance closer to 50 ohms
- D It increases the radiation angle

Al Penney
VO1NO

A

Review Question 10

What is an advantage of downward sloping radials on a ground plane antenna?

- A It brings the feed point impedance closer to 300 ohms
 - B It lowers the radiation angle
 - C It brings the feed point impedance closer to 50 ohms
 - D It increases the radiation angle
-
- C It brings the feed point impedance closer to 50 ohms

Al Penney
VO1NO

C

Review Question 11

Which of the following transmission lines will give the best match to the base of a quarter-wave ground-plane antenna?

- A 75-ohm coaxial cable
- B 50-ohm coaxial cable
- C 300-ohm balanced transmission line
- D 75-ohm balanced transmission line

Al Penney
VO1NO

B

Review Question 11

Which of the following transmission lines will give the best match to the base of a quarter-wave ground-plane antenna?

- A 75-ohm coaxial cable
 - B 50-ohm coaxial cable
 - C 300-ohm balanced transmission line
 - D 75-ohm balanced transmission line
-
- B 50-ohm coaxial cable

Al Penney
VO1NO

B

Review Question 12

How can a vertical antenna, 2 metres in length, be made to resonate in the 80metre band for mobile use?

- A Install an inductor in series with the antenna
- B Use a solid radiating element instead of tubing
- C Install a capacitor in series with the antenna
- D Connect the transmission line shield to the vehicle's chassis

Al Penney
VO1NO

A

Review Question 12

How can a vertical antenna, 2 metres in length, be made to resonate in the 80metre band for mobile use?

- A Install an inductor in series with the antenna
 - B Use a solid radiating element instead of tubing
 - C Install a capacitor in series with the antenna
 - D Connect the transmission line shield to the vehicle's chassis
-
- A Install an inductor in series with the antenna

Al Penney
VO1NO

A

Review Question 13

When using a ground mounted vertical HF antenna, what can you do to reduce ground losses?

- A Raise the antenna one eighth of a wavelength
- B Install a wire ground system (radials) at the antenna base
- C Use an insulator with a higher breakdown voltage
- D Improve the impedance match at the base

Al Penney
VO1NO

B

Review Question 13

When using a ground mounted vertical HF antenna, what can you do to reduce ground losses?

- A Raise the antenna one eighth of a wavelength
 - B Install a wire ground system (radials) at the antenna base
 - C Use an insulator with a higher breakdown voltage
 - D Improve the impedance match at the base
-
- B Install a wire ground system (radials) at the antenna base

Al Penney
VO1NO

B

Review Question 14

Why is a loading coil often used with an HF mobile vertical antenna?

- A To tune out capacitive reactance
- B To lower the losses
- C To lower the Q
- D To filter out electrical noise

Al Penney
VO1NO

A

Review Question 14

Why is a loading coil often used with an HF mobile vertical antenna?

- A To tune out capacitive reactance
 - B To lower the losses
 - C To lower the Q
 - D To filter out electrical noise
-
- A To tune out capacitive reactance

Al Penney
VO1NO

A

Review Question 15

If a half-wave dipole is converted to a Yagi by adding a slightly shorter parasitic element, in what direction(s) does the radiation strength increase?

- A In both directions parallel to the elements
- B From the dipole towards the new element
- C From the new element towards the dipole
- D In both directions at right angles to the elements

Al Penney
VO1NO

B

Review Question 15

If a half-wave dipole is converted to a Yagi by adding a slightly shorter parasitic element, in what direction(s) does the radiation strength increase?

- A In both directions parallel to the elements
 - B From the dipole towards the new element
 - C From the new element towards the dipole
 - D In both directions at right angles to the elements
-
- B From the dipole towards the new element

Al Penney
VO1NO

B

Review Question 16

What configuration of radials will match an elevated quarter-wave vertical antenna to a 50-ohm coaxial cable?

- A Downward sloping quarter-wave radials
- B Horizontal quarter-wave radials
- C Horizontal half-wave radials
- D Upward sloping half-wave radials

Al Penney
VO1NO

A

Review Question 16

What configuration of radials will match an elevated quarter-wave vertical antenna to a 50-ohm coaxial cable?

- A Downward sloping quarter-wave radials
 - B Horizontal quarter-wave radials
 - C Horizontal half-wave radials
 - D Upward sloping half-wave radials
-
- A Downward sloping quarter-wave radials

Al Penney
VO1NO

A

Review Question 17

What design feature allows a single Yagi antenna to function on the 20-metre, 15-metre and 10-metre bands?

- A Multiple reflector elements
- B T-match feed circuit
- C Element traps
- D Large diameter elements

Al Penney
VO1NO

C

Review Question 17

What design feature allows a single Yagi antenna to function on the 20-metre, 15-metre and 10-metre bands?

- A Multiple reflector elements
 - B T-match feed circuit
 - C Element traps
 - D Large diameter elements
-
- C Element traps

Al Penney
VO1NO

C

Review Question 18

What is the approximate length of the driven element of a Yagi antenna for 14.0 MHz?

- A 5.09 metres
- B 10.71 metres
- C 21.43 metres
- D 10.21 metres

Al Penney
VO1NO

D

Review Question 18

What is the approximate length of the driven element of a Yagi antenna for 14.0 MHz?

- A 5.09 metres
- B 10.71 metres
- C 21.43 metres
- D 10.21 metres

- D 10.21 metres

Al Penney
VO1NO

D

Review Question 19

What is one effect of increasing the boom length and adding directors to a Yagi antenna?

- A Beamwidth increases
- B Power handling capability increases
- C Gain increases
- D Front-to-back ratio increases

Al Penney
VO1NO

C

Review Question 19

What is one effect of increasing the boom length and adding directors to a Yagi antenna?

- A Beamwidth increases
 - B Power handling capability increases
 - C Gain increases
 - D Front-to-back ratio increases
-
- C Gain increases

Al Penney
VO1NO

C

Review Question 20

What does "antenna front-to-back ratio" mean in reference to a Yagi antenna?

- A The ratio of the power radiated by the director element, to the power radiated by the reflector element
- B The ratio of the length of the director element, to the length of the reflector element
- C The ratio of the driven element-to director spacing, to the driven element to-reflector spacing
- D The ratio of the power radiated in the forward direction to the power radiated in the opposite direction

Al Penney
VO1NO

D

Review Question 20

What does "antenna front-to-back ratio" mean in reference to a Yagi antenna?

- A The ratio of the power radiated by the director element, to the power radiated by the reflector element
- B The ratio of the length of the director element, to the length of the reflector element
- C The ratio of the driven element-to director spacing, to the driven element to-reflector spacing
- D The ratio of the power radiated in the forward direction to the power radiated in the opposite direction
- D The ratio of the power radiated in the forward direction to the power radiated in the opposite direction

Al Penney
VO1NO

D

Review Question 21

Why are Yagi antennas often used on HF bands from 20 metres to 10 metres?

- A Their high angle of radiation facilitates long-range communications
- B Rotatable high-gain antennas become feasible due to shorter element lengths
- C Excellent omnidirectional coverage in the horizontal plane
- D Their wide bandwidth provides a good match over an entire band

Al Penney
VO1NO

B

Review Question 21

Why are Yagi antennas often used on HF bands from 20 metres to 10 metres?

- A Their high angle of radiation facilitates long-range communications
 - B Rotatable high-gain antennas become feasible due to shorter element lengths
 - C Excellent omnidirectional coverage in the horizontal plane
 - D Their wide bandwidth provides a good match over an entire band
-
- B Rotatable high-gain antennas become feasible due to shorter element lengths

Al Penney
VO1NO

B

Review Question 22

If a half-wave dipole is converted to a Yagi by adding a slightly longer element, in what direction(s) does the radiation strength increase?

- A In both directions parallel to the elements
- B From the new element towards the dipole
- C From the dipole towards the new element
- D In both directions at right angles to the elements

Al Penney
VO1NO

B

Review Question 22

If a half-wave dipole is converted to a Yagi by adding a slightly longer element, in what direction(s) does the radiation strength increase?

- A In both directions parallel to the elements
 - B From the new element towards the dipole
 - C From the dipole towards the new element
 - D In both directions at right angles to the elements
-
- B From the new element towards the dipole

Al Penney
VO1NO

B

Review Question 23

What is the approximate length of the director element of a Yagi antenna for 21.1 MHz?

- A 3.55 metres
- B 6.44 metres
- C 7.11 metres
- D 3.38 metres

Al Penney
VO1NO

B

Review Question 23

What is the approximate length of the director element of a Yagi antenna for 21.1 MHz?

- A 3.55 metres
 - B 6.44 metres
 - C 7.11 metres
 - D 3.38 metres
-
- B 6.44 metres

Al Penney
VO1NO

B

Review Question 24

What is the major advantage of increasing element spacing on a Yagi antenna?

- A Higher gain
- B Better front-to-back ratio
- C Lower feed point impedance
- D Wider bandwidth

Al Penney
VO1NO

A

Review Question 24

What is the major advantage of increasing element spacing on a Yagi antenna?

- A Higher gain
 - B Better front-to-back ratio
 - C Lower feed point impedance
 - D Wider bandwidth
-
- A Higher gain

Al Penney
VO1NO

A

Review Question 25

What is one disadvantage of a random wire antenna?

- A It must be longer than 1 wavelength
- B It must be installed in a straight line, without bends
- C You may experience RF feedback in your station
- D It usually produces vertically polarized radiation

Al Penney
VO1NO

C

Review Question 25

What is one disadvantage of a random wire antenna?

- A It must be longer than 1 wavelength
 - B It must be installed in a straight line, without bends
 - C You may experience RF feedback in your station
 - D It usually produces vertically polarized radiation
-
- C You may experience RF feedback in your station

Al Penney
VO1NO

C

Review Question 26

For a three-element Yagi antenna, what approximate element spacing (in wavelengths) provides the best compromise between gain and front-to back ratio?

- A 0.50
- B 0.75
- C 0.20
- D 0.10

Al Penney
VO1NO

C

Review Question 26

For a three-element Yagi antenna, what approximate element spacing (in wavelengths) provides the best compromise between gain and front-to back ratio?

- A 0.50
- B 0.75
- C 0.20
- D 0.10

- C 0.20

Al Penney
VO1NO

C

Review Question 27

What is a disadvantage of using an antenna equipped with traps?

- A It can only be used for one band
- B It may radiate harmonics more readily
- C It is too sharply directional at lower frequencies
- D It picks up more noise than a simple dipole

Al Penney
VO1NO

B

Review Question 27

What is a disadvantage of using an antenna equipped with traps?

- A It can only be used for one band
 - B It may radiate harmonics more readily
 - C It is too sharply directional at lower frequencies
 - D It picks up more noise than a simple dipole
-
- B It may radiate harmonics more readily

Al Penney
VO1NO

B

Review Question 28

What is a delta loop antenna with parasitic elements?

- A An antenna made from several triangular coils of wire on an insulating form
- B An antenna consisting of multiple elements, each a triangular loop whose total length is approximately one wavelength
- C An antenna made of a large multi-turn triangular loop
- D An antenna system made of three vertical antennas, arranged in a triangular shape

Al Penney
VO1NO

B

Review Question 28

What is a delta loop antenna with parasitic elements?

- A An antenna made from several triangular coils of wire on an insulating form
 - B An antenna consisting of multiple elements, each a triangular loop whose total length is approximately one wavelength
 - C An antenna made of a large multi-turn triangular loop
 - D An antenna system made of three vertical antennas, arranged in a triangular shape
-
- B An antenna consisting of multiple elements, each a triangular loop whose total length is approximately one wavelength

Al Penney
VO1NO

B

Review Question 29

What is a quad antenna?

- A Two or more parallel four-sided wire loops, each approximately one wavelength long
- B A centre-fed half-wavelength long wire
- C A quarter-wavelength vertical conductor fed at the bottom
- D Four straight, parallel elements in line with each other, each approximately a half-wavelength long

Al Penney
VO1NO

A

Review Question 29

What is a quad antenna?

- A Two or more parallel four-sided wire loops, each approximately one wavelength long
 - B A centre-fed half-wavelength long wire
 - C A quarter-wavelength vertical conductor fed at the bottom
 - D Four straight, parallel elements in line with each other, each approximately a half-wavelength long
-
- A Two or more parallel four-sided wire loops, each approximately one wavelength long

Al Penney
VO1NO

A

Review Question 30

What is the approximate length of the driven element of a quad antenna designed for 14.3 MHz?

- A 10.49 metres
- B 16.36 metres
- C 5.35 metres
- D 21.40 metres

Al Penney
VO1NO

D

Review Question 30

What is the approximate length of the driven element of a quad antenna designed for 14.3 MHz?

- A 10.49 metres
- B 16.36 metres
- C 5.35 metres
- D 21.40 metres

- D 21.40 metres

Al Penney
VO1NO

D

Review Question 31

What is a major disadvantage of a quad antenna, as compared to a Yagi antenna with the same number of elements and boom length?

- A Requires a more heavy-duty mast or tower
- B Lower gain
- C Requires matching to the transmission line
- D More susceptible to weather damage

Al Penney
VO1NO

D

Review Question 31

What is a major disadvantage of a quad antenna, as compared to a Yagi antenna with the same number of elements and boom length?

- A Requires a more heavy-duty mast or tower
 - B Lower gain
 - C Requires matching to the transmission line
 - D More susceptible to weather damage
-
- D More susceptible to weather damage

Al Penney
VO1NO

D

Review Question 32

You are constructing an HF delta loop antenna. It is oriented with the bottom element parallel to the ground. Where should you locate the feed point for horizontal polarization?

- A In the centre of a side element
- B At a junction of the bottom element and a side element
- C On a side element, one quarter wavelength from the top
- D In the centre of the bottom element

Al Penney
VO1NO

D

Review Question 32

You are constructing an HF delta loop antenna. It is oriented with the bottom element parallel to the ground. Where should you locate the feed point for horizontal polarization?

- A In the centre of a side element
- B At a junction of the bottom element and a side element
- C On a side element, one quarter wavelength from the top
- D In the centre of the bottom element

- D In the centre of the bottom element

Al Penney
VO1NO

D

Review Question 33

What is the approximate length of the wire for a horizontal loop tuned at 7.15 MHz?

- A 41.96 metres
- B 10.49 metres
- C 20.00 metres
- D 42.80 metres

Al Penney
VO1NO

D

Review Question 33

What is the approximate length of the wire for a horizontal loop tuned at 7.15 MHz?

- A 41.96 metres
- B 10.49 metres
- C 20.00 metres
- D 42.80 metres

- D 42.80 metres

Al Penney
VO1NO

D

Review Question 34

The quad antenna consists of two or more square loops of wire. The driven element has an approximate overall length of:

- A two wavelengths
- B one half wavelength
- C one wavelength
- D three quarters of a wavelength

Al Penney
VO1NO

C

Review Question 34

The quad antenna consists of two or more square loops of wire. The driven element has an approximate overall length of:

- A two wavelengths
 - B one half wavelength
 - C one wavelength
 - D three quarters of a wavelength
-
- C one wavelength

Al Penney
VO1NO

C

Review Question 35

What is a major advantage of an end-fed half-wave antenna (EFHW)?

- A Capable of multi-band operation
- B Matching network not needed to feed with coaxial cable
- C High resistance to local noise pickup
- D Develops minimal common-mode current

Al Penney
VO1NO

A

Review Question 35

What is a major advantage of an end-fed half-wave antenna (EFHW)?

- A Capable of multi-band operation
 - B Matching network not needed to feed with coaxial cable
 - C High resistance to local noise pickup
 - D Develops minimal common-mode current
-
- A Capable of multi-band operation

Al Penney
VO1NO

A

Review Question 36

- What is the approximate length of the reflector element of a Yagi antenna for 28.1 MHz?
- A 10.68 metres
- B 2.54 metres
- C 2.67 metres
- D 5.34 metres

Al Penney
VO1NO

D

Review Question 36

- What is the approximate length of the reflector element of a Yagi antenna for 28.1 MHz?
- A 10.68 metres
- B 2.54 metres
- C 2.67 metres
- D 5.34 metres
- D 5.34 metres

Al Penney
VO1NO

D

Review Question 37

Moving the feed point of a quad antenna from a side parallel to the ground to a side perpendicular to the ground will have what effect?

- A It will significantly decrease the antenna feed point impedance
- B It will significantly increase the antenna feed point impedance
- C It will change the antenna polarization from horizontal to vertical
- D It will change the antenna polarization from vertical to horizontal

Al Penney
VO1NO

C

Review Question 37

Moving the feed point of a quad antenna from a side parallel to the ground to a side perpendicular to the ground will have what effect?

- A It will significantly decrease the antenna feed point impedance
 - B It will significantly increase the antenna feed point impedance
 - C It will change the antenna polarization from horizontal to vertical
 - D It will change the antenna polarization from vertical to horizontal
-
- C It will change the antenna polarization from horizontal to vertical

Al Penney
VO1NO

C

Questions

Al Penney
VO1NO